


# 9200/9205/9210/9215 User Guide

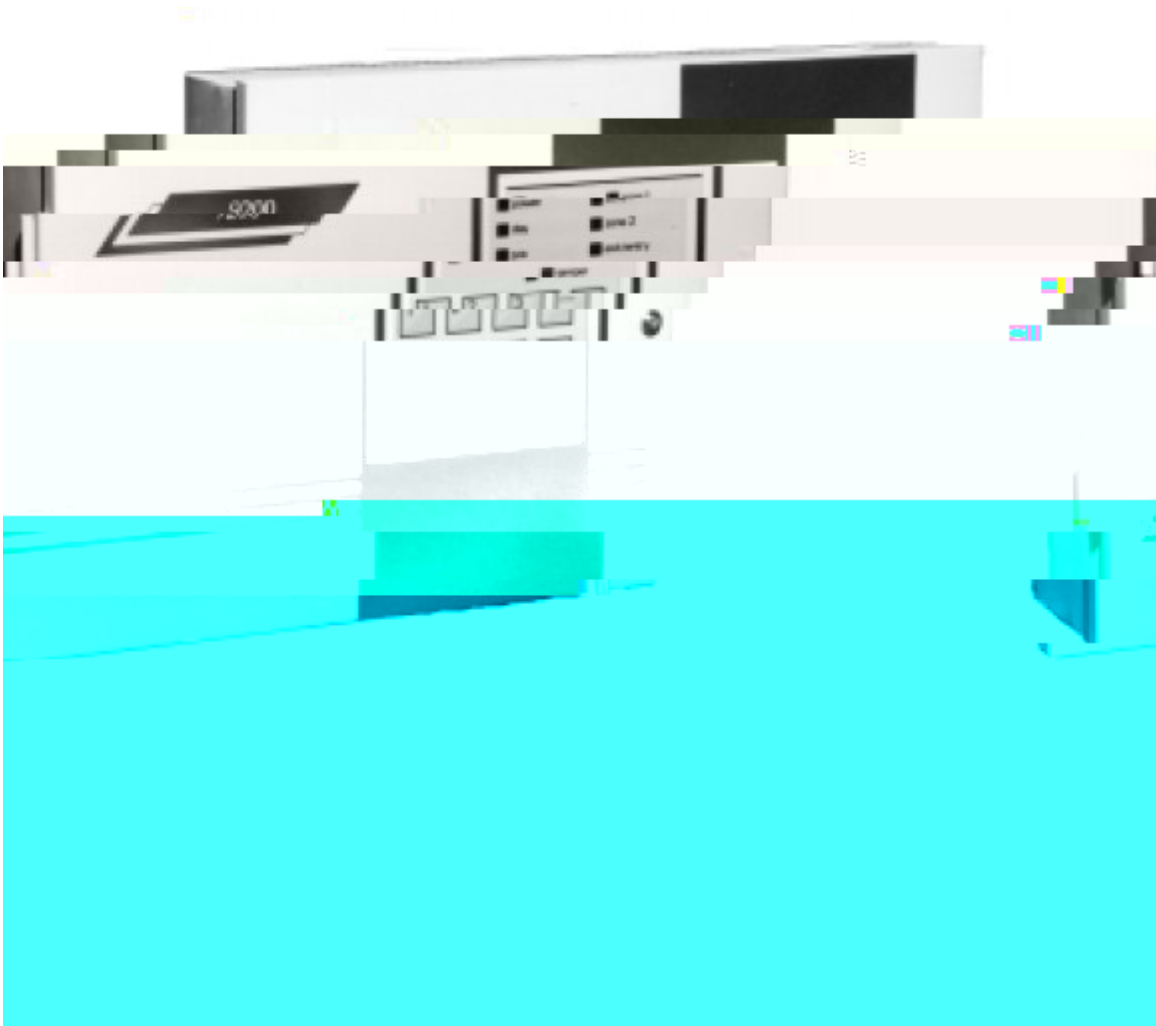

**Content:**

Internal Sounder  
 External Communicator  
 Internal Keypad for 9210 and 9215  
 Troubleshooting

**Compatible Equipment**

|      |          |
|------|----------|
| 9040 | Internal |
| 660  | Speed    |
| 9220 | Internal |
| 8506 | External |

## User Commands

|                  |   |
|------------------|---|
| Set/Unset System | User code   |
| Part Set         | User code + OMIT2 + ENTER                               |
| Test Bells       | BELL TEST + ENTER + User code                           |
| Walk Test        | WALK TEST + ENTER User code<br>User code to end test    |
| Change User code | 6 + ENTER<br>current user code<br>new user code + ENTER |