

? ? ? ?

2

? ? ? ?

### TO FULL SET

Key-in your four digit user code (shown as ???? at left). The exit tone starts. Leave premises via the designated exit door. Exit tone stops after preset time. Your alarm system is SET.

### TO PART SET

Your alarm system may have been installed to allow you to have part of the premises set while other area(s) are off. To part set the system press 2 then ↵, followed by your user code. Note that the part set exit tone is usually a buzzer sound, but your system may be programmed to silent set.


**Note:** If you enter your user code incorrectly four times in a row then the system will raise a tamper alarm. See opposite.

### TO SWITCH OFF

Zone No.

? ? ? ?

by OMIT for all the zones you want to omit and then key in your user code. The system flashes the light(s) of the omitted zone(s) during the exit time and then sets. Note that you cannot omit a panic or fire zone, or the EE zone. The system will not raise an alarm if any omitted detector is triggered during this setting cycle. The system will reinstate the detector(s) and set normally the next time you set the system.

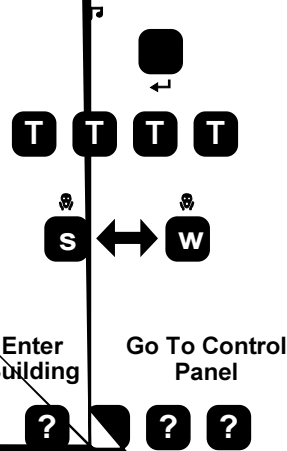

### TO SWITCH CHIME ON OR OFF

Key in 7 then ↵, followed by your user code to switch Chime on or off. When Chime is on, the internal sounder chimes when the chime zones operate. Note that the Installer must program your chime zones.

### KEYPAD PA

Your system may be programmed to allow you to start a Panic Alarm from the keypad (ask your Installer). If so, then press keys 1 and 3 together to start a Panic Alarm.

### AFTER AN ALARM

**To switch the bells off:** Key-in your user code. The sounders will stop and the zone light(s) for the detectors that triggered the alarm will glow.

**Reset system:** You must reset the system before it can be used again. Key-in your access code again. All the zone lights should go off. The system is now ready for use.

**Fire Alarm:** The fire alarm is a two tone siren note from the internal sounder. Leave the building immediately and call the Fire Brigade. Do not go back into the building until it is safe to do so. Switch the alarm off and reset the system as described above. If you have trouble resetting the system make sure that the fire detector is not being triggered.

**Tamper or Panic Alarm:** If you hear the internal sounder when the system is off then look at the control panel: If the Tamper light glows then key-in your user code to stop the sounder. Call your alarm installer for service. If the Panic light (zone 6) glows then deal with the cause of the alarm first. Next, reset the panic button, then switch the system bells off and reset the system (see opposite).

### TEST BELLS

The system is unset before starting the test. Press ↵ followed by your user code. The internal sounder will operate for three seconds and then the strobe will operate for three seconds.

### WALK TEST

Press 5 then ↵, followed by your user code. The internal sounder gives a steady tone.

Open and close the Exit/Entry zone and zones 1 to 4. (Open and close zone 5 if it is NOT a fire zone, and zone 6 if it is NOT a panic button.) Each time you open a zone, the internal sounder gives a pulsing tone.

**You cannot test the 'Tamper Circuits' without creating an alarm condition. Similarly, a panic button will always cause a full alarm.**

To stop walk test, key-in your access code.



5

? ? ? ?

Trigger Detectors (Not Panic Alarm)

? ? ? ?

**TO READ THE LOG**