

9452/9453 User Guide



User Commands

| | |
|--------------------|--|
| Full Set System | 1 + ENTER + User code |
| Part Set System | 2 + ENTER + User code |
| Unset/Reset System | User code |
| Omit zone | 1 (or 2) + ENTER + User code + OMIT + zone number (repeat OMIT + zone number for other zones as required). |
| Omit 24 hr zone | OMIT + ENTER + User code + zone number (+ zone number for other zones as required) |
| Change User code | 4 + ENTER + Old code + Old code (the system beeps twice)+ New code (the system beeps twice) |
| Read Log | 5 + ENTER + User code 1 to read earlier events 3 to read later events ENTER to leave the log |
| Chime On/Off | 7 + ENTER + User code |
| Bell Test | 8 + ENTER + User code |
| Walk Test | 9 + ENTER + User code ENTER to end the test |