

AUTODIALLER

HYL004

Installation & Programming Guide

Please read these instructions before you start the installation

Features

- LCD Display
- Programmable 9 x 32 digit phone numbers for each trigger
- 10 second duration recordable message for each trigger
- Built in memory for telephone numbers and programmed settings
- Dual triggers

Contents

- 1 x Autodialler
- 1 x Telephone cable
- 1 x Fixing kit
- 1 x Installation & Programming Guide



Installation

The Autodialler

Important: before installing the Autodialler please take the following into consideration

1. Position the Autodialler near a phone socket
2. Before you start to drill holes check for hidden wires and pipe work
3. Keep the Autodialler out of the reach of small children


How to install the Autodialler

1. Remove the small screw from the battery compartment cover and keep safe.
2. Mark and drill 2 holes on a horizontal line 160mm apart.
3. Insert the masonry plugs; screw the 2 fixing screws into the plugs leaving 2mm protruding.
4. Run a cable from the Alarm Control Panel to the Autodialler.
5. Trigger 1 = Alarm switched negative.
6. Trigger 2 = Alarm switched negative.
7. Connect phone line from the LINE on the Autodialler to an existing phone socket, if this is in use you will have to purchase a double adaptor. If you want to plug into an existing telephone you will have to purchase an RJ11 to RJ11 cable, connect one end into PHONE on the back of the Autodialler and the other into the telephone.
8. Install 1 x 9V battery to the terminals, making sure it is the correct polarity.
9. The Autodialler will beep once followed by a double beep.
10. Replace the battery compartment cover.
11. Connect the 12V power supply.
12. Place the Autodialler onto the wall, making sure the tamper switch is pressed in.
13. You can now start to program the Autodialler.

Installation

Connections on the Autodialler

Important: The tamper terminals are for connection to the tamper inputs on an alarm control panel

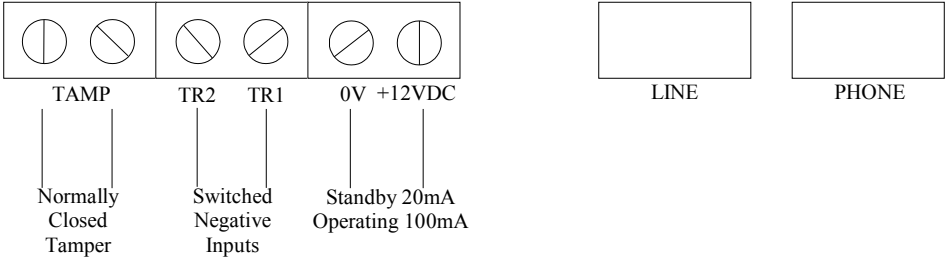

Autodialler Programming Guide

How to program the Autodialler (if no key is pressed for 30 seconds, the dialler will automatically exit the programming mode).

NOTICE: THE SYSTEM MUST BE IN THE OFF MODE FOR ALL PROGRAMMING.

How to record the voice messages :

You can RECORD 2 voice messages of 10 seconds duration, one for each of the 2 triggers.

Quick Guide :

Press **1** **2** **3** **4** **RECORD** **1/2** **ENT** Record message now.

- 1) Key in the four digit user PASSWORD code (factory default 1234).
- 2) Press **RECORD**
- 3) Press **1** to save as the message for Trigger 1 or **2** to save as the message for Trigger 2.
- 4) Press **ENT** to start recording. You now have 10 seconds to record your message.
- 5) Press **ENT** to stop the recording or wait for the 10 seconds to end.

How to play the voice messages :

Press **1** **2** **3** **4** **PLAY** **1** **ENT** To play back message 1.

Press **1** **2** **3** **4** **PLAY** **2** **ENT** To play back message 2.

How to program the phone numbers :

You can enter a maximum of nine telephone numbers for the triggers, each number can be a maximum of 32 digits.

Quick Guide :

Press **1** **2** **3** **4** **PROG** **3** **ENT** **1-9** **ENT** <Telephone number> **ENT**

Autodialler Programming Guide

How to program the phone numbers (continued) :

- 1) Key in the four digit user PASSWORD code (factory default 1234).
- 2) Press **PROG** **3** **ENT** The number you press after the ENTER button will select the position in the sequence you want that phone number to dial, 1=1st number called, 2=2nd number called.
- 3) Press **ENT**
- 4) Key in the first telephone number followed by **ENT**
- 5) Press **ESC** to exit the programming mode.
- 6) Repeat the process until you have entered all the numbers you wish the Autodialler to call once the unit has been triggered, the Autodialler will accept a maximum of 9 different phone numbers .

How to delete phone numbers :

Quick Guide :

Press **1** **2** **3** **4** **PROG** **3** **ENT** **1-9** **ENT** **ESC**

How to designate telephone numbers to TRIG 1 and TRIG 2 :

Quick Guide :

Press **1** **2** **3** **4** **PROG** **6** **ENT** **1/2** **ENT** **1-9** **ENT**

- 1) Key in the four digit user PASSWORD code (factory default 1234).
- 2) Press **PROG** **6** **ENT**
- 3) Press **1/2** (1 for Trig1 and 2 for Trig 2) **ENT**
- 4) Press **1-9** (The phone number to be designated) **ENT**
- 5) Repeat the process until you have designated all the numbers required to each trigger. Any number of the phone numbers can be designated to either or both Triggers.

The numbers showing on the LCD display are the phone numbers assigned to that Trigger.
Pressing buttons **1** to **9** will toggle the numbers on/off.

How to change the user PASSWORD :

Default password is 1234

Quick Guide :

Press **1** **2** **3** **4** **PWORD** <New Code> <Reconfirm New Code>

- 1) Key in the four digit user PASSWORD code (factory default 1234).
- 2) Press **PWORD**
- 3) The LCD will show n-p
- 4) Key in your new four digit <PASSWORD>
- 5) The LCD will show c-p
- 6) Key in your new four digit <PASSWORD> again
- 7) The LCD will change to ACC

Autodialler Programming Guide

How to program the Autodialler to give a local audible alarm when triggered :

Default setting is alarm OFF

Quick Guide :

Press (1) (2) (3) (4) (PROG) (1) (ENT) (0/1) (ENT)

1) Key in the four digit user PASSWORD code (factory default 1234).

2) Press (PROG) (1) (ENT) (0/1) (ENT)

0=Without Audible Alarm 1=With Audible Alarm

How to program the Audible Alarm sound duration :

Default setting is 3 minutes

Quick Guide :

Press (1) (2) (3) (4) (PROG) (2) (ENT) <TIME> (ENT)

1) Key in the four digit user PASSWORD code (factory default 1234).

2) Press (PROG) (2) (ENT) <TIME> (ENT)

<TIME> = (1) = 1 Minute (9) (9) = 99 Minutes

The maximum time is 99 minutes, 20 minutes is the recommended maximum time.

How to program the Trigger Delay and Arm Delay times :

Default setting is both at 0 seconds, instant.

The Trigger Delay time can be set to 0, 30 or 60 seconds. This is the delay time between a Trigger being activated and the Autodialler dialling out.

Quick Guide :

Press (1) (2) (3) (4) (PROG) (4) (ENT) <TIME> (ENT)

1) Key in the four digit user PASSWORD code (factory default 1234).

2) Press (PROG) (4) (ENT) <TIME> (ENT)

<TIME> = (0) = 0 Seconds (3) = 30 Seconds (6) = 60 Seconds

The Arm Delay time can be set to 0, 30 or 60 seconds. This is the delay time between the Autodialler being Armed and the Triggers being active.

Quick Guide :

Press (1) (2) (3) (4) (PROG) (5) (ENT) <TIME> (ENT)

1) Key in the four digit user PASSWORD code (factory default 1234).

2) Press (PROG) (5) (ENT) <TIME> (ENT)

<TIME> = (0) = 0 Seconds (3) = 30 Seconds (6) = 60 Seconds

Autodialler Programming Guide

How to Turn the Autodialler ON :

Quick Guide :

Press ① ② ③ ④ ENT

- 1) At least 1 voice message and 1 phone number must be entered before the Autodialler can be turned on.
- 2) Key in the four digit user PASSWORD code (factory default 1234).
- 3) Press ENT
- 4) The Autodialler will show "ON" on the LCD display.
- 5) The Triggers will become active after the Trigger Delay time has expired.

How to Turn the Autodialler OFF :

Quick Guide :

Press ① ② ③ ④ ESC

- 1) Key in the four digit user PASSWORD code (factory default 1234).
- 3) Press ESC
- 4) The Autodialler will show "OFF" on the LCD display.

How to stop the Autodialler from dialling when triggered :

Quick Guide :

When the phone is answered , press # or * on the telephone keypad.

When the Autodialler starts dialling it will dial the first telephone number and repeat the pre-recorded voice message five times. If there is no response from the phone then it will hang up and dial the next number until all the programmed numbers for that trigger are dialled. It will repeat this dial sequence three times and display "NO ANSWER" if there is no response from any of the phone numbers. To stop this dial sequence press the * key on the telephone keypad that is receiving the call. The Autodialler will stop its dialling sequence and the Audible Alarm (if programmed) will stop. If the Audible Alarm has been programmed as active then pressing the # key will stop the dialling sequence but the alarm will continue to sound until timed out. In both cases the Autodialler will remain "ON" waiting for any further triggers.

How to reset the Autodialler :

Remove the power and the phone line lead, take the Autodialler from the wall and remove the 9V battery, inside the battery compartment is a switch, move it to the ERASE position, place the power back onto the system then press DELETE twice, the Autodialler will beep twice to confirm the memory has been erased. Remove all power again, place the switch back to NORMAL, replace the 9V battery and place the Autodialler back onto the wall, replace the telephone line, power the dialler back up, the Autodialler is now set back to the factory default settings and is ready to be turned "ON".

NOTES

Important: It is recommended to change the backup batteries at least once a year

1. First make sure that the Autodialler is not on. Then release it from the wall
2. Remove the battery door and take out the old battery, re-insert a new alkaline 9V battery
3. Fit the battery door and hand the Autodialler back on the wall

Note and Caution:

- A Leaking battery will result in poor performance and could damage the system. It is recommended that the battery be periodically checked.
- Do not mount the Autodialler in areas that are exposed to extreme heat or moisture as this could adversely affect the performance of the system
- Use only a damp cloth and general household cleaning agents to wipe the unit clean. Do not use turpentine, thinners, gasoline or similar substances to clean the unit

TEL: Sales: +44 (0) 1706 363998 Technical: +44 (0) 1706 363990
FAX: +44 (0) 1706 363991

EMAIL: info@gjd.co.uk

Monday to Friday 08:30 - 17:00

Unit 2, Birch Industrial Estate, Whittle Lane, Heywood, OL10 2SX, UK
www.gjd.co.uk