



# How to upgrade a cooker control outlet



## Plan It

### Things you'll need:

Socket




Screwdrivers



Pliers



Small spirit level

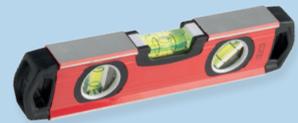

Green and yellow sleeving (if required)

## Upgrading a cooker control outlet

1.



To start, make sure you are familiar with the safety warnings in this leaflet, the instructions supplied with the product and the mains supply is turned off.

2.



At the consumer unit, find the trip switch which protects the circuit and turn it all the way off. The indicator window should stay green.

3.



Test power is not supplied to the socket by using a plug in socket tester or multimeter. Unscrew the retaining screws on the socket so that it is released from the mounting box.

4.



Gently ease the socket from the mounting box to show the wiring.

# Upgrading a cooker control outlet (continued)

5.



For this outlet there will be two sets of wires; one set for the supply (incoming power) and one for load (cooker).

6.




Unscrew each terminal to release the wires, noting supply and load. You should now be able to remove the socket and place it to one side.

7.




Line up the new socket and take note of where each terminal is located.

8.

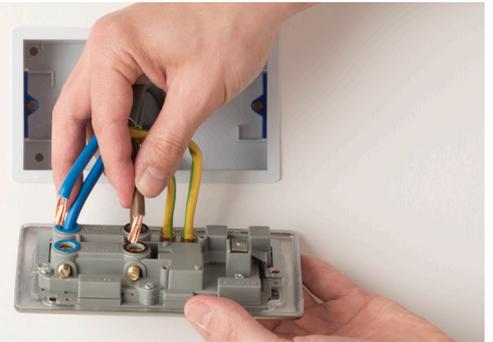

Noting supply and load, place a single blue wire into each neutral terminals, brown wires into the live terminals and the green/yellow wires into the earth terminals. There is one terminal for each wire.

9.

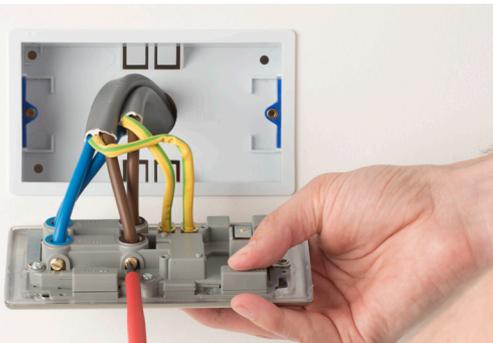

Make sure that the wires are fully inserted into the terminal and that no bare copper wire is visible. Tighten the screws securely onto the cable.

10.



Gently press the socket back into place over the mounting box. Take care not to trap any wires between the wall and the socket.

11.



Screw the retaining screws provided. Use a spirit level to make sure that the socket is level. Restore the power at the consumer unit and test.



# Things to think about

For your safety, this product must be installed in accordance with local Building Regulations.

If in any doubt, or where required by the law, consult a competent person who is registered with an electrical self-certification scheme. Further information is available online or from your Local Authority.

Please read carefully and use in accordance with these safety wiring instructions. Before commencing any electrical work ensure the supply is switched off at the mains. Either by switching off the consumer unit or by removing the appropriate fuse. Wiring should be in accordance with the latest edition of the IET regulations (BS 7671) To prevent fire hazard always use cable of the correct rating, size & type for the application.

Any bare earth wires must be covered with appropriate green/yellow sleeving. Warning do not exceed the load rating of this device as stated on the rear of the product.

Always refer to and follow precisely the manufacturer's instructions when fitting a new socket. Any electrical installation must comply with Building Regulations, specifically Part P, which came into effect on 1 January 2005, with the amended version coming into effect on 6 April 2006. A further update came into force on 6 April 2013. Refer to these regulations before carrying out any electrical work. Download at [www.planningportal.gov.uk](http://www.planningportal.gov.uk).

Replacing a socket is non-notifiable under Part P, and therefore it is not necessary to have the work carried out by a qualified electrician, or to inform your local authority building inspector of the work, except in high-risk areas, or special locations, such as bathrooms.

For a full list of these locations, refer to Part P. Part P strongly advises taking advice from a qualified electrician for carrying out any DIY electrical work. All electrical work must be tested and inspected.

This guide shows fitting a metal socket onto a plastic flush mounting box and the instructions shown over page only relate to plastic mounting boxes. If you have metal mounting boxes, earthing requirements will vary, so refer to the manufacturer's guidelines.

If the socket you are changing has two earth terminals, this means that it has a dual earth facility, which is required if you need to comply with Regulation 607 of BS7671. As always, follow the manufacturer's guidelines and recommendations in such instances.

If you find earth wires are bare, you must sheathe them with green and yellow sleeving.

Colours used in hard-wire installations (including cables supplying sockets) have changed in recent years. The table below shows the different colours for wires, prior to and after April 2004.

Pre April 2004	
<b>LIVE</b>	Red
<b>NEUTRAL</b>	Black
<b>EARTH</b>	Green and Yellow

Post April 2004	
<b>Brown</b>	
<b>Blue</b>	
<b>Green and Yellow</b>	

The information in this leaflet shows post April 2004 wiring.

How to upgrade to a 1 gang USB socket

How to upgrade a 2 gang socket

How to upgrade to a 2 gang USB socket

How to upgrade a cooker control outlet

How to upgrade a dimmer switch

How to upgrade a light switch



View more of our 'How to' guides online at [bgelectrical.uk](http://bgelectrical.uk)