


# ASPIRANTE

***FERVORE***


***Monobasin tap  
with glass shelf***

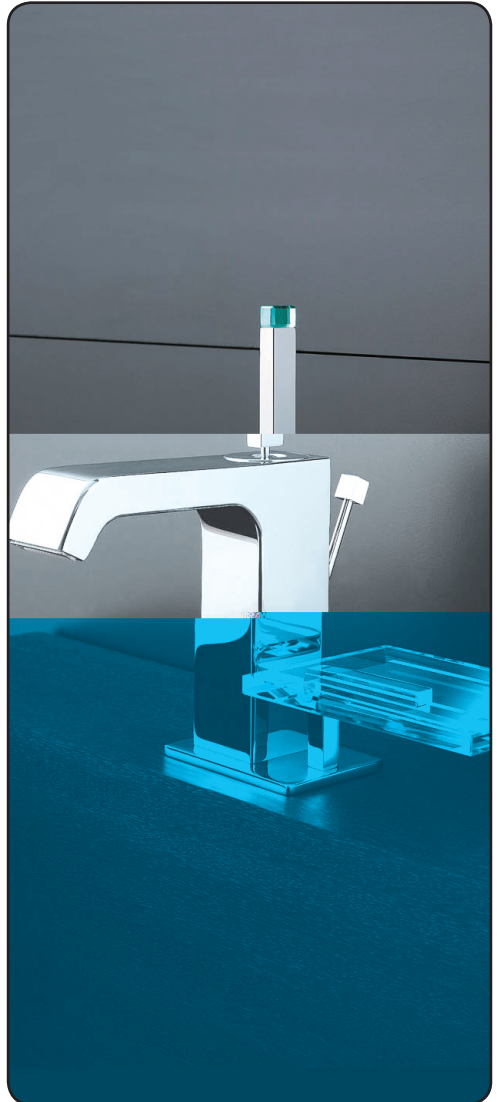

**Installation  
and operating  
instructions**

INSTALLERS PLEASE NOTE THESE INSTRUCTIONS ARE TO BE LEFT WITH THE USER

Fig.1

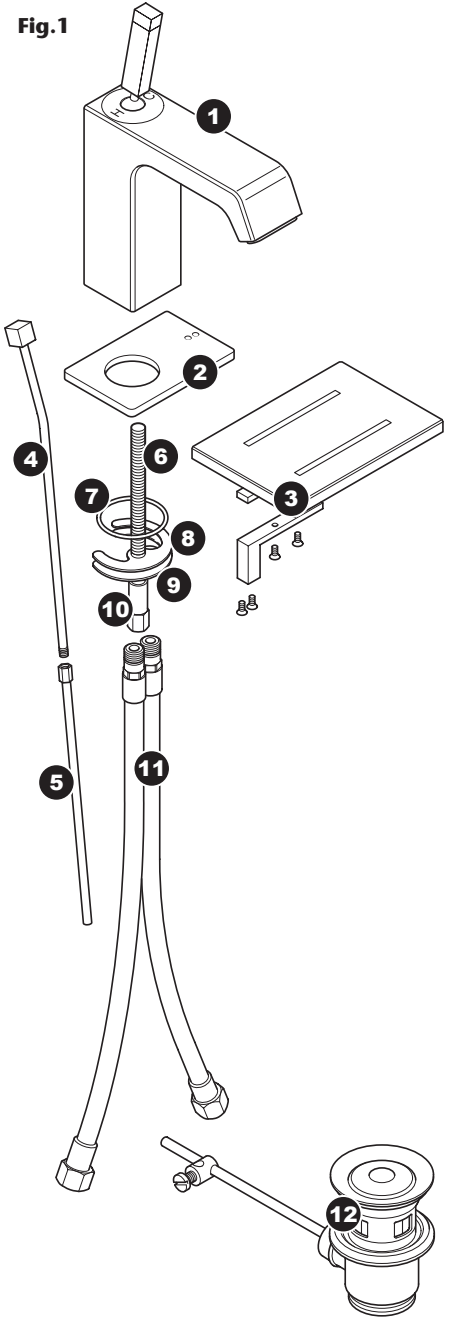

## INTRODUCTION

This guide contains all the necessary fitting instructions for your Fervore monobasin tap with glass shelf.

Please read this guide carefully before beginning your installation.

**Note:** The Fervore monobasin tap is suitable for use with single hole style basins only.

The mixer tap installation must be carried out by a suitably competent person and in the sequence specified in these instructions.

Care taken during the installation will provide a long life and trouble free operation from your tap.

**DO NOT choose a position where the tap could become frozen.**

Replacement parts can be ordered from Triton Customer Service (see back page).

## COMPONENTS

The tap set comprises the following items:

1. Monobasin tap
2. Tap base
3. Glass shelf and bracket
4. Waste gate control
5. Extension rod
6. Threaded stud
7. 'O' ring
8. Rubber horseshoe seal
9. Horseshoe plate
10. Brass Nut
11. Flexi hose
12. Waste gate assembly, including:
  - Retaining nut
  - Drainage control lever
  - Fixing block

Check that all parts are correct.

## SITE REQUIREMENTS

### WARNING!

**The mixer must not be positioned where it will be subject to freezing conditions.**

This tap is suitable for high water pressures only and should be fitted in accordance with Water Regulations.

Running pressure — 1 bar to 5 bar

Static pressure — 10 bar

**Note:** For the ideal flow pattern of the mixer, a maximum running pressure of 3 bar is recommended.

## INSTALLATION

### Fitting the mixer tap

Screw the two flexible pipes into the base of the mixer (**fig.2**). Note that the hot supply hose (red) screws into to the left-hand inlet and the cold supply hose (blue) to the right-hand inlet.

Slide the threaded end of the waste gate control through the vertical slot at the rear of the tap. (**fig.3**). Screw on the extension rod onto the waste gate control.





Screw the stud into the threaded hole in the base of the tap body.


Assemble the glass shelf and bracket to the tap base using the screws supplied (**fig.4**).

Fit the tap base and shelf assembly over the hole in the basin, making sure the 'O' ring is in place in the base recess. Insert the tap unit into the hole then align with the tap base.

From the underside of the basin, insert the rubber seal and the horseshoe plate onto the stud. Make sure that the seals and plates align (**fig.5**).

Screw the brass nut onto the threaded stud and tighten fully to secure the tap in position.

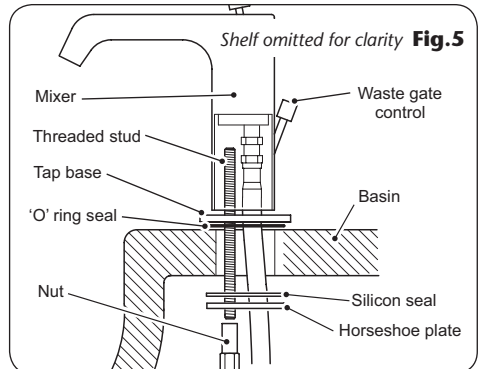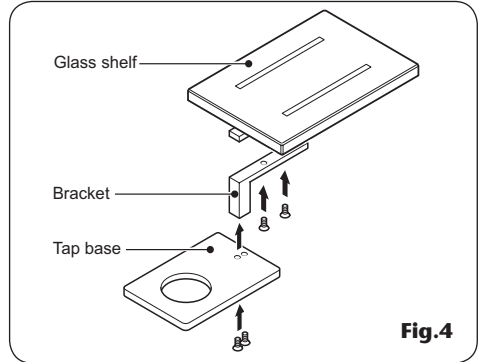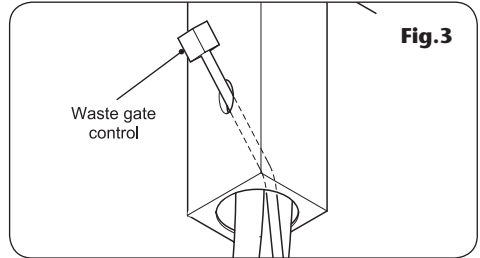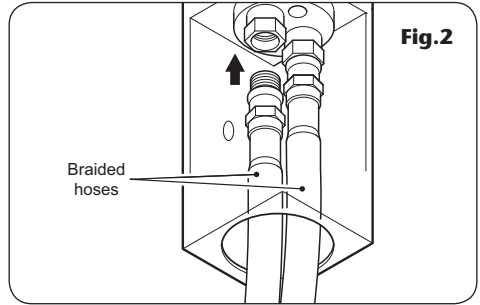

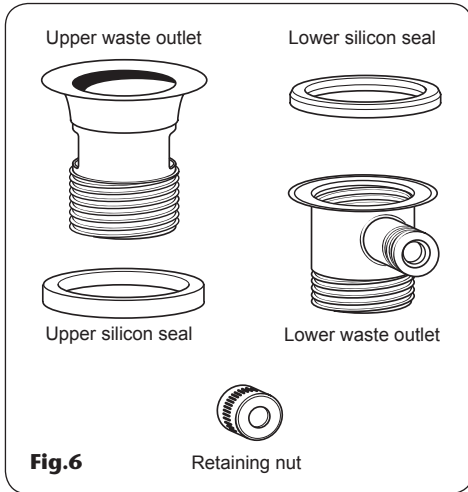

### Fitting the waste unit


Remove the plunger from the waste unit. Take the waste assembly apart, as shown in **(fig.6)**.

Slide the upper silicon seal onto the upper waste outlet and fit the lower silicon seal onto the lip on the lower waste outlet **(Fig.7)**.

Insert the control lever through the opening in the side of the lower waste outlet **(Fig.7)**. Fit the retaining nut and tighten. Finger tight should be sufficient.


Place the upper waste fitting into the drainage hole. From the underside of the basin, screw the lower waste outlet onto the upper waste outlet — DO NOT tighten at this stage.

Position the lower fitting such that the control arm faces towards the rear of the basin. Fully tighten the upper waste unit into the lower waste unit.

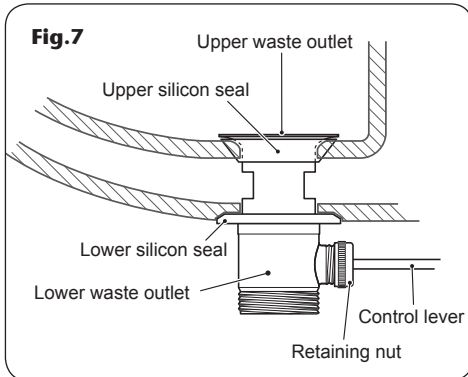

Place the fixing block onto the control lever and slide into position such that the circular section of the fixing block can connect to the drainage control rod **(Fig.8)**. Tighten the fixing block screws to secure the control rod to the control lever.

Replace the plunger. To alter the plunger gap, remove the plunger from the waste unit and adjust the position of the screw in the plunger base **(Fig.9)**.

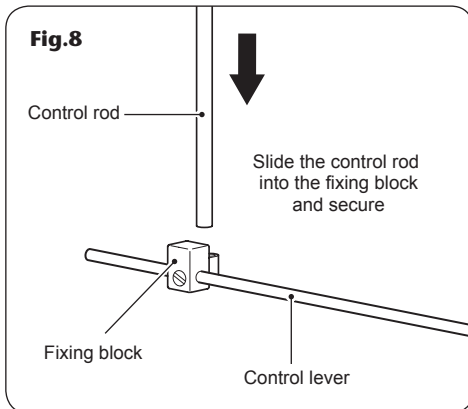

## FINISHING THE INSTALLATION

**IMPORTANT:** Before completing the connection of the water supply to the inlets of the mixer, flush out the system to remove any debris in the pipework. This can be done by connecting a hose to the pipework and turning on the mains water supply long enough to clear the debris to waste.

Make sure to fit a small rubber seal in the end of each of the steel braided hoses. Using standard ½" BSP tap connectors, connect the left-hand steel braided hose to the hot supply and the right-hand hose to the cold supply.

Connect the waste outlet to standard 1¼" waste trap.

## OPERATION

The lever on the top of the mixer controls both flow and temperature.




To start the flow push the lever towards the rear; the further it is pushed back the greater the flow. To turn off the mixer, pull the lever fully forwards.

To adjust the temperature push the lever towards the left for hotter water and towards the right for cooler (Fig.10).


To close the waste gate, lift the waste gate control at the rear of the unit (Fig.11). This will drop the plunger into the waste outlet. To open the waste gate, push down on the control.

## CLEANING

**IMPORTANT:** DO NOT use abrasive or solvent cleaning fluids. The mixer unit should be cleaned using a soft cloth and warm water. Any stains should be removed using washing up liquid.

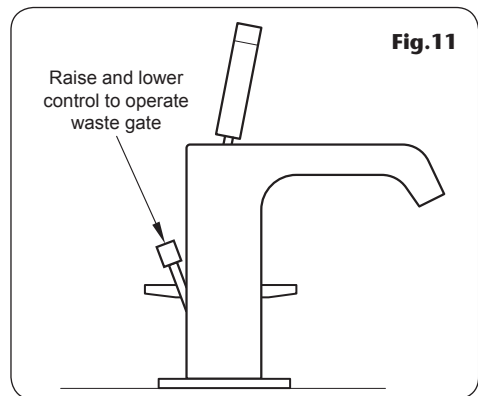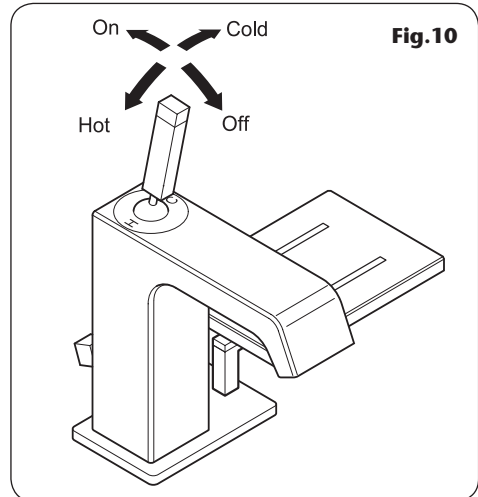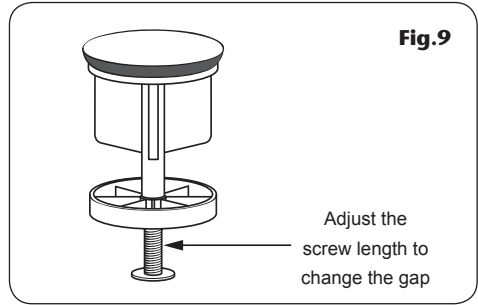

## Monobasin tap with shelf

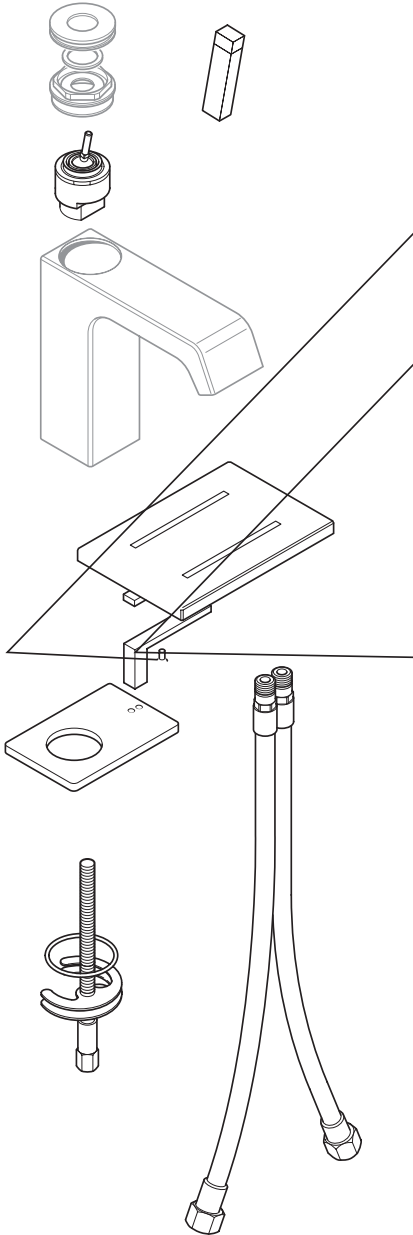

<b>Ref.</b>	<b>Description</b>	<b>Part No.</b>
1.	Joystick control lever	83309370
2.	Joystick control cartridge	83309310
3.	Anti-splash	83309400
4.	Glass shelf & tap base	86001570
5.	Monobasin fixing kit	83309410
6.	Monobasin hose	83309420



## Service Policy

In the event of a complaint occurring, the following procedure should be followed:

- 1** Telephone Customer Service on +44 (0) 24 7637 2222 (+44 (0) 84 5762 6591 in Scotland and in Northern Ireland), having available the model number and power rating of the product, together with the date of purchase.
- 2** Triton Customer Service will be able to confirm whether the fault can be rectified by either the provision of a replacement part or a site visit from a qualified Triton service engineer.
- 3** If a service call is required the unit must be fully installed for the call to be booked and the date confirmed. In order to speed up your request, please have your postcode available when booking a service call.
- 4** It is essential that you or an appointed representative (who must be a person of 18 years of age or more) is present during the service engineer's visit and receipt of purchase is shown.
- 5** A charge will be made in the event of an aborted service call by you but not by us, or where a call under the terms of guarantee has been booked and the failure is not product related (i.e. scaling and furring, incorrect water pressure, pressure relief device operation, electrical installation faults).
- 6** If the product is no longer covered by the guarantee, a charge will be made for the site visit and for any parts supplied.
- 7** Service charges are based on the account being settled when work is complete, the engineer will then request payment for the invoice. If this is not made to the service engineer or settled within ten working days, an administration charge will be added.

## Replacement Parts Policy

**Availability:** It is the policy of Triton to maintain availability of parts for the current range of products for supply after the guarantee has expired. Stocks of spare parts will be maintained for the duration of the product's manufacture and for a period of five years thereafter.

In the event of a spare part not being available a substitute part will be supplied.

**Payment:** The following payment methods can be used to obtain spare parts:

- 1** By post, pre-payment of pro forma invoice by cheque or money order.
- 2** By telephone, quoting credit card (MasterCard or Visa) details.
- 3** By website order, [www.tritonshowers.co.uk](http://www.tritonshowers.co.uk)

## TRITON STANDARD GUARANTEE

Triton Plc guarantee this product against all mechanical defects arising from faulty workmanship or materials for a period of five years for domestic use only, from the date of purchase, provided that it has been installed by a competent person in full accordance with the fitting instructions.

Any part found to be defective during this guarantee period we undertake to repair or replace at our option without charge so long as it has been properly maintained and operated in accordance with the operating instructions, and has not been subject to misuse or damage.

This product must not be taken apart, modified or repaired except by a person authorised by Triton Plc. This guarantee applies only to products installed within the United Kingdom and does not apply to products used commercially. This guarantee does not affect your statutory rights.

### *What is not covered:*

- 1** Breakdown due to: *a)* use other than domestic use by you or your resident family; *b)* wilful act or neglect; *c)* any malfunction resulting from the incorrect use or quality of water or incorrect setting of controls; *d)* faulty installation.
- 2** Repair costs for damage caused by foreign objects or substances.
- 3** Total loss of the product due to non-availability of parts.
- 4** Compensation for loss of use of the product or consequential loss of any kind.
- 5** Call out charges where no fault has been found with the appliance.
- 6** The cost of repair or replacement of pressure relief devices, sprayheads, hoses, riser rails and/ or wall bracket or any other accessories installed at the same time.
- 7** The cost of routine maintenance, adjustments, overhaul modifications or loss or damage arising therefrom, including the cost of repairing damage, breakdown, malfunction caused by corrosion, furring, pipe scaling, limescale, system debris or frost.

**Customer Service:** ☎ +44 (0) 24 7637 2222

**Scottish and Northern Ireland  
Customer Service:** ☎ +44 (0) 84 5762 6591

**Trade Installer Hotline:** ☎ +44 (0) 24 7632 5491

**Fax:** +44 (0) 24 7632 4564

[www.aspiranteshowers.co.uk](http://www.aspiranteshowers.co.uk)

**E mail:** [technical@triton.plc.uk](mailto:technical@triton.plc.uk)

Triton Plc  
Triton Road  
Nuneaton  
Warwickshire CV11 4NR