



## SERVICE POLICY

In the event of you needing to contact the Galaxy Customer Service Department, the following procedure should be followed:-

- 1** Before telephoning the Galaxy Customer Service Department you should ensure that you have the model number, power rating, serial number and date of purchase.
- 2** The Galaxy Customer Service Department will be able to inform you whether the fault can be rectified by the provision of a replacement part or an on site visit by a Qualified Service Engineer.
- 3** If a service call is booked, you or a representative must be present during the Engineers visit.
- 4** A charge will be made where a call under the terms of the guarantee has been booked and a failure was not product related, or an engineer arrives and is not able to gain access.
- 5** If the product is no longer covered by the Guarantee, a charge will be made for the site visit and for any parts supplied.

**Customer Service Department**

**Telephone: 0845 600 5111 Fax: 01489 773053**

9.00 am - 5.00 pm Monday to Friday



# Aqua 4000

## & 4000Si

### *Instantaneous Electric Shower Installation Instructions*

#### **IMPORTANT!**

This Step-by-Step guide should be given to the customer after installation and demonstration.



## SECTION 1 PACKING CONTENTS

- Shower Unit
- Showerhead
- Showerhead Key
- Flexible Hose
- Slider Rail Tube
- Slider Rail Brackets
- Slider Rail Showerhead Holder
- Soap Dish
- Screw Pack

- All plumbing connections must be completed before making the electrical connections.
- The outlet of your shower acts as a vent and must **NOT** be connected to any form of tap or fitting not recommended by Galaxy Showers Ltd.
- Always switch OFF at the isolating switch when not in use.

## SECTION 2 GENERAL ADVICE TO SHOWER UNIT USERS

### IMPORTANT

- Shower installation must be carried out by a suitably qualified person and conform with IEE Regulations and National Water Council bylaws.
- This shower unit is designed to be connected to a 15mm cold water mains supply.

**Do not connect to a tank supply unless a suitable booster pump is fitted.**

- The minimum recommended running water pressure to which the shower heater may be connected is 15 lb/sq in (1 Bar). Running pressure at 8 litres per minute. The maximum static pressure recommended is 150 lb/sq in (10 Bar). *(Minimum running pressure must be obtained at 9 litres/minute for 9.5kW and 11 litres/minute for the 10.5kW).*
- The shower unit must not be fitted where it may be exposed to frost, for example in an outdoor shower area. **The shower must not be used if suspected of being frozen.** Frost damage is not covered by the guarantee.
- Plumbers jointing compound must not be used.** In instances of difficult joints use P.T.F.E. Tape. The use of compound invalidates the guarantee.

The following points will help you to understand how your Galaxy shower unit operates.

The flow rate of water passing through the shower unit determines the water temperature. The lower the flow the warmer the water, the higher the flow the cooler the water.

The temperature produced by the shower unit will vary between seasons on any one setting of the temperature control. This is due to variance in the temperature of the water supply, which becomes cooler in winter than summer.

The stabiliser valve maintains an almost constant shower temperature during mains water pressure changes.

If changes in temperature are experienced in normal use, it is likely to be caused by water pressure falling below the minimum level. Falls in water pressure may be due to water being drawn off at other points within the building.

The shower head must be cleaned regularly to remove scale and debris. If the water becomes hot and you are unable to obtain cooler water, check the shower head for blockage.

Plan your installation carefully. On the rising main, this may be beneath the loft, where it feeds the storage tank. Only the water main. **Do not** **down s** from the tank

Avoid connecting the shower to the water supply. The main cause a shower

An isolating valve water supply f

plugs and screws provided, do not fully tighten at this stage.

### IMPORTANT

To comply with National Water Council bylaws a double check valve must be fitted with all flexible shower accessories where it is possible that the shower head may come into contact with used water i.e. In the bath or shower tray.

removable access panel, to allow easy access when connecting the water supply. (Please remember to replace this trim before refitting the cover).

Connect the mains water supply to the shower unit using a 15mm copper or stainless pipe with a 15mm compression elbow or 15mm push-fit elbow. **Do not use excessive force when making the connection to the unit.**

pipework for leaks.

## SECTION 6 ELECTRICAL CONNECTION

Warning! This appliance must be earthed

The shower unit must be permanently connected to the electricity supply, direct

## SECTION 4 INSTALLATION

Position your shower unit on the wall away from the direct spray of the shower and at about the same height as the shower head position.

from the consumer unit via a double pole linked switch with a minimum contact gap of 3mm. The switch must be readily accessible and clearly identifiable and out of reach of a person using a fixed bath or shower tray, unless the switch is cord operated. The wiring must be connected to the switch without the use of a plug or socket outlet.

The cable size required is determined by the kW rating of the shower and the distance between the shower and the consumer unit. The table below will help you choose the correct cable for your installation, but it will depend upon the precise circumstances of the installation. If you are in any doubt consult an electrician.

KW RATING	NOMINAL AT 240v	MIN RATING OF ISOLATING SWITCH	FUSE RATING	MAX CABLE RUN	
				6mm	10mm
7.0	29.10amps	30 amps	30 amps	29m	48m
7.5	31.25amps	40 amps	40 amps	27m	44m
8.0	33.33amps	40 amps	40 amps	25m	42m
8.5	35.41amps	40 amps	40 amps	23m	38m
9.5	39.58amps	40 amps	40 amps	21m	32m
10.5	43.75amps	45 amps	45 amps	18m	30m

The incoming cable should be hidden.

Connect the live cable to the terminal marked **L**.  
Connect the neutral cable to the terminal marked **N**.  
Connect the earth cable to the terminal marked **E** on the back plate.

### IMPORTANT

Ensure that the terminal block screws are fully tightened and that no cable insulation is trapped under screws,

Ensure the cable clamp is used to secure the cable.

The earth continuity conductor of the electrical installation must be effectively connected to all exposed metal parts of other appliances and services in the room in which the shower unit is installed to confirm with IEE regulations.

## SECTION 7

### FITTING THE COVER INTO POSITION

**NOTE:** It is necessary to align the 'D' flat on the reverse side of the Power Selector and Temperature knobs with their opposite control spindles before the cover is located.

Secure the cover with the two fixing screws provided.

**IMPORTANT:** Turn the flow control knob anti clockwise until the valve is fully open before switching on the unit. This will ensure a fast fill up of the unit when the shower is first switched on.

Switch on the power to the shower unit at the consumer unit and the double pole switch.

Remove the shower head from the flexible hose and point to waste.

Press the uppermost **COLD** power selector button, this action will also activate the internal solenoid valve turning the water On.

Let the water flow through the shower unit to release any air which may be in the system and fill the shower unit with water.

**IMPORTANT:** The shower unit must be full of water before heat settings are used.

Switch the shower unit OFF by pressing the **STOP** button.

The water will continue flow for a few seconds when the **STOP** button is pushed. This hot water flushing out program is called '**Phased Shutdown**' ensuring that anyone stepping into the shower immediately after use does not have an unpleasantly hot start to their shower.

Re-fit the shower head to the flexible hose.

Your shower is now ready to use.

We recommend that you allow your shower to reach a stable temperature before you commence showering.

## SECTION 8


### RISER RAIL & SOAP DISH FITTING INSTRUCTIONS

#### TIPS


A piece of insulating or masking tape applied to the wall before marking out the fixing holes will help stop the drill from wandering, particularly on tiled surfaces. When working near a basin or bath, insert the plug in the waste fitting so that small parts cannot be lost. Take care not to drop accessories or tools into basin or bath.

#### CAUTION


Check there are no hidden cables or pipes before drilling holes for wall plugs. Exercise great care when using power tools near water. The use of a residual current device (RCD) is recommended.

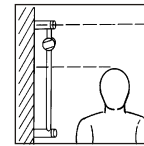


1. Establish position for the riser rail, and mark the wall for the lower mounting bracket. Make allowances for the tallest person likely to use the shower regularly.

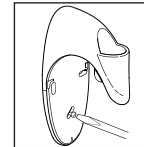


2. Use a No 10/5.5mm masonry drill to make a hole 35mm deep, and fit the wall plug. (NB some wall constructions may require the use of alternative types of wall fixings). Screw the lower bracket base to the wall.

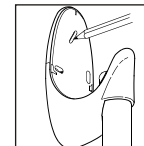

3. Locate the crimped end of the riser rail (Figure 4) into the mounting bracket, then fit the upper bracket. Ensure the rail is vertical, then mark the wall for the fixing.

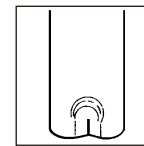


4. The crimped end of the riser rail. NOTE If it is necessary to shorten the rail, use a junior hacksaw to cut the excess material from the plain end of the rail.

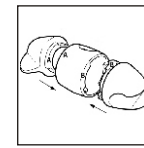


5. The three components that comprise the Handset Height Adjuster assembly are produced with alphabetical 'A's and 'B's moulded into the end section of each part. Simply just match the


letter identification of each part with the central piece i.e. 'A' to 'A' and 'B' to 'B' for correct assembly.

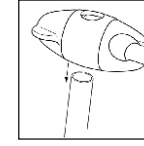


6. With the showerhead height adjuster lever set a 3 o'clock and the showerhead holder in the upright position, slide the assembly onto the rail. Tighten to the rail by turning the lever.

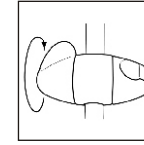


7. To lock the Handset Height Adjuster at your chosen position on the rail. Turn the lever up right. This action is also used for holding the showerhead at the angle required.

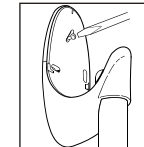


8. Re-assemble the rail and screw the upper mounting bracket in place.

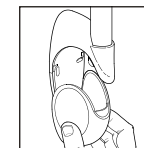


9. Slide the end cap onto the mounting brackets.

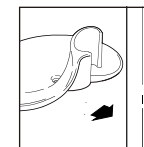


10. Snap the soap dish onto the rail below the holder assembly.

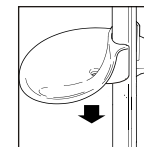

11. Slide soap dish down the rail to required position.

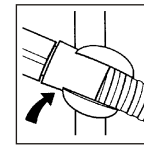

12. Firmly attach flexible hose to the showerhead making sure sealing washer is in place. NOTE the adjustable slider grips the conical end of the hose, not the handle of the showerhead.

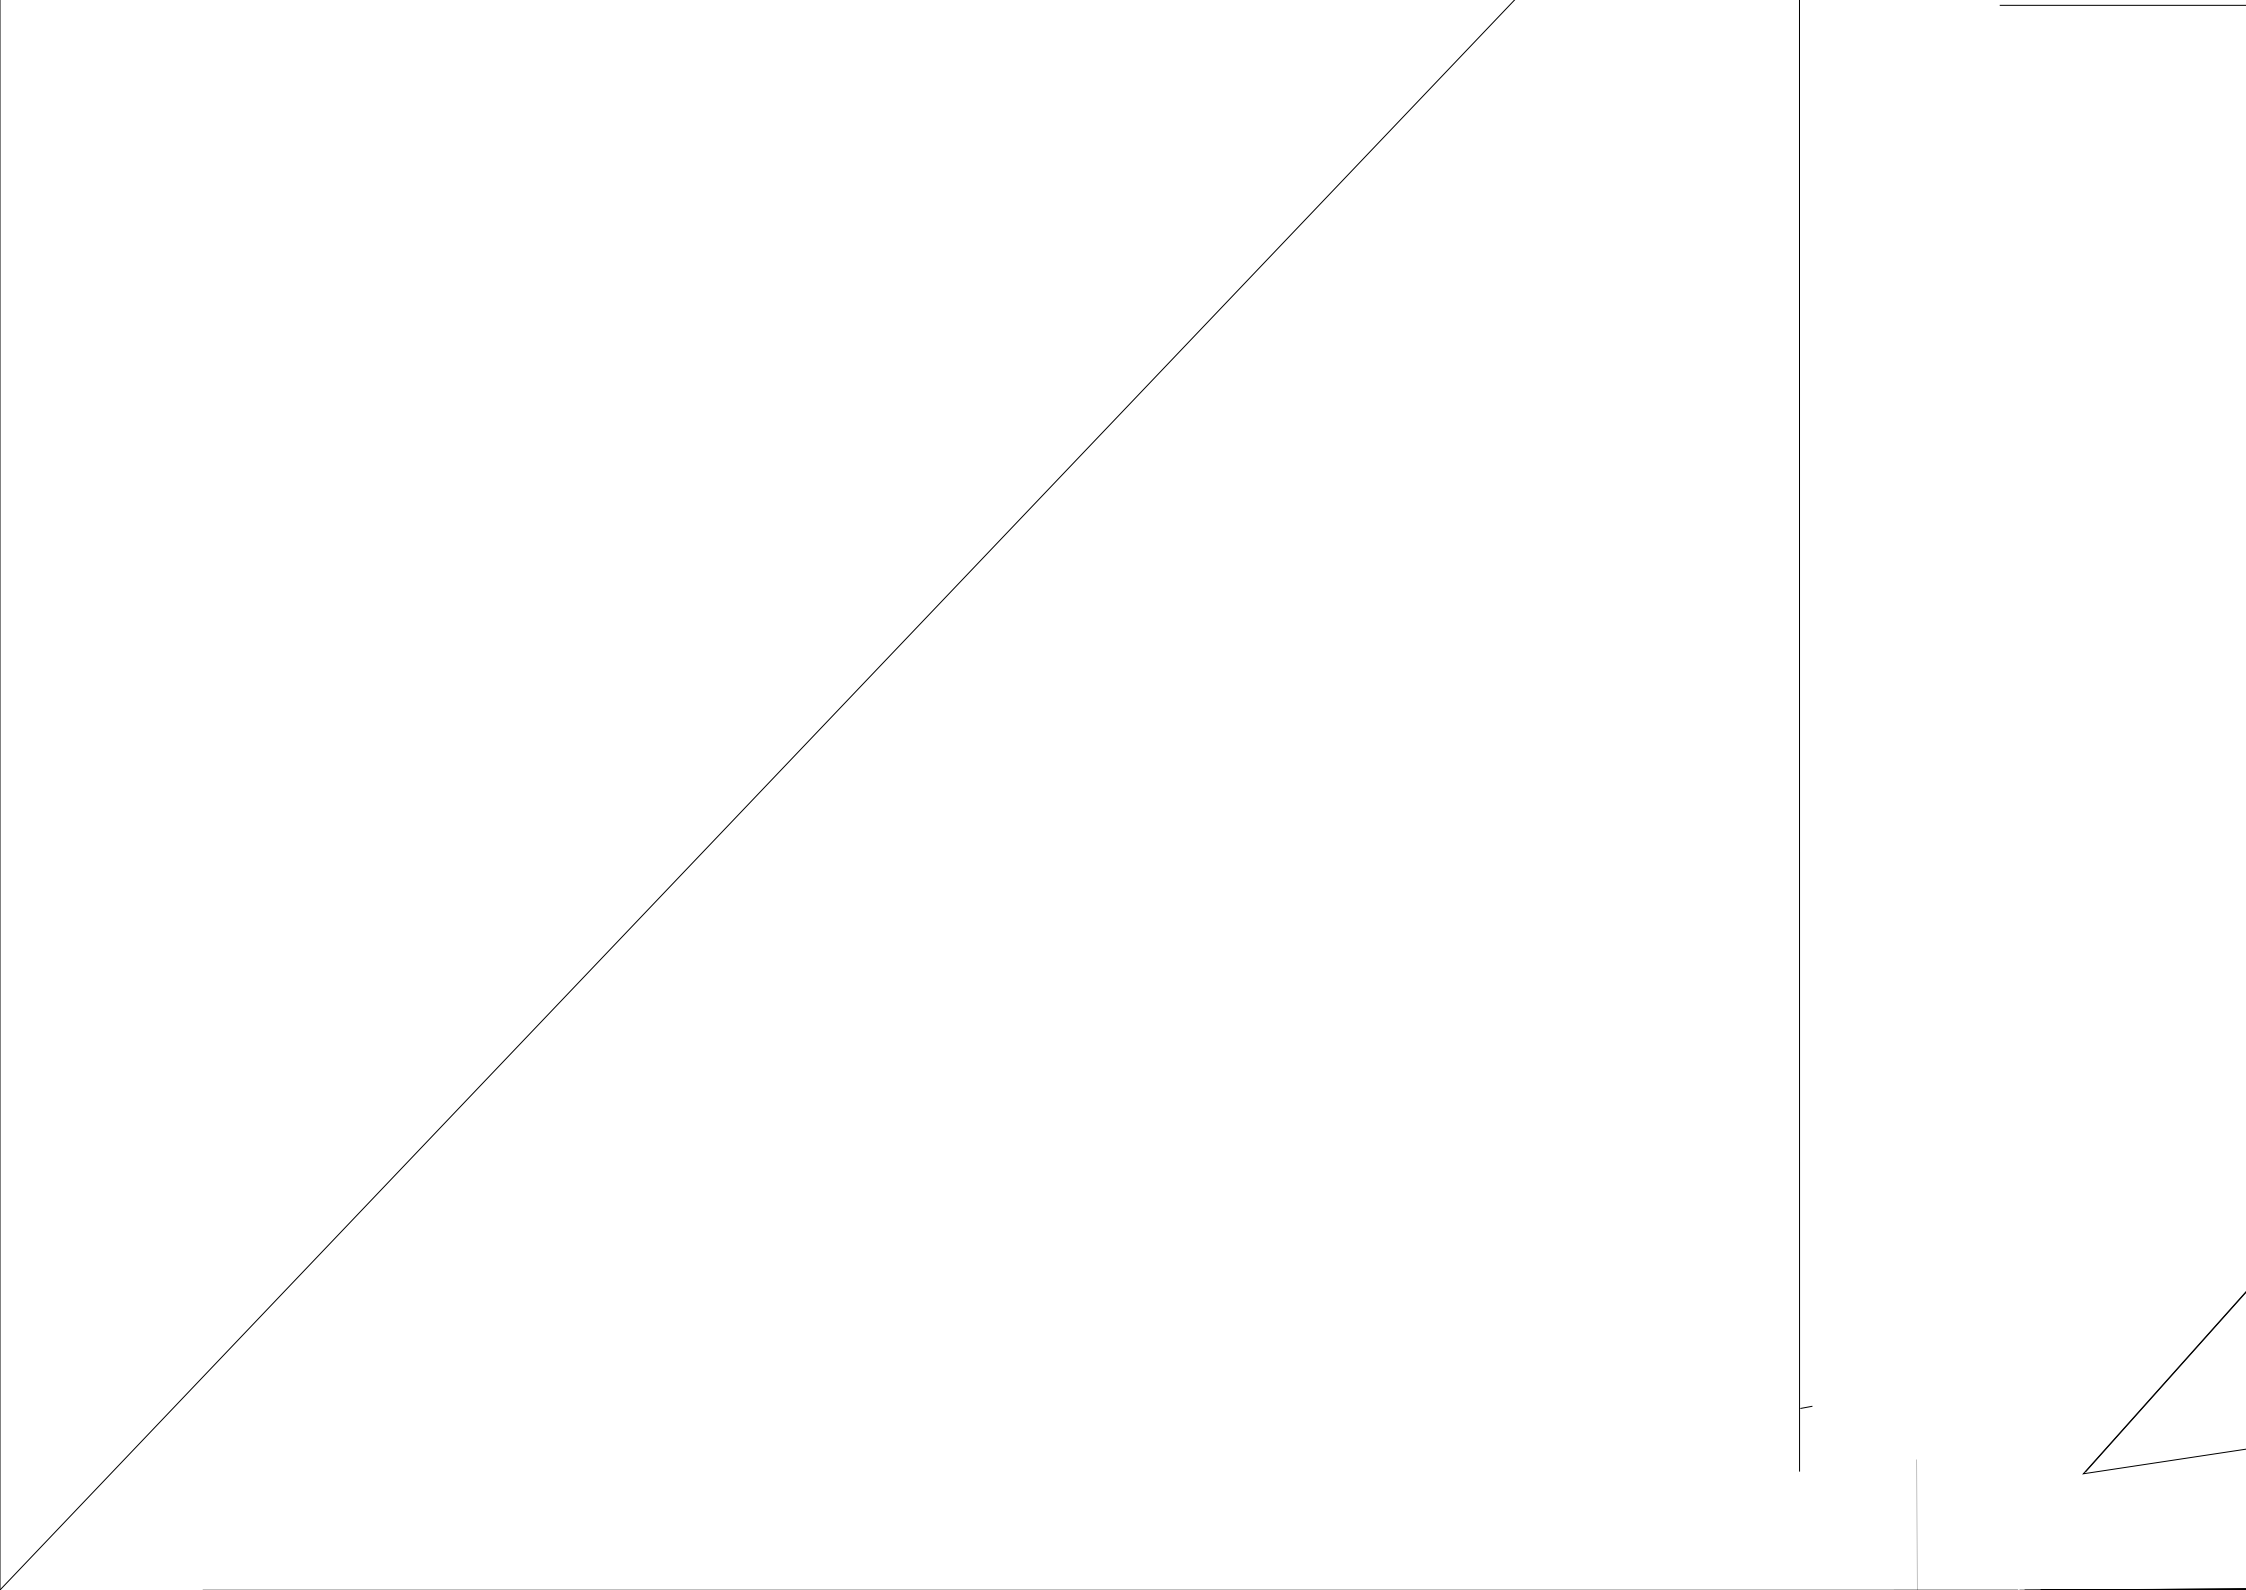

# SECTION 11

## OPERATING FEATURES

### Auto Reset Neon Indicator

The Auto Reset Neon Indicator will be illuminated during normal operation if an overheat temperature is sensed, power to the element will be cut off, water will continue to flow until the unit has cooled sufficiently. Power to the elements will be automatically restored.

If the Auto Reset Neon Indicator persistently functions, ensure that the showerhead is free from scale and debris which will increase the flow of water through the unit.

### Low Pressure Neon Indicator

The low-pressure indicator will be illuminated during normal operation if there is a drop in mains water pressure too low to operate the shower unit. Also turn the flow control knob anti-clockwise to increase the flow of water through the unit.

### Phased Shutdown

The Phased Shutdown ensures that water will continue flow for a few seconds when the STOP button is pushed. This hot water flushing out program ensures that anyone stepping into the shower immediately after use does not have a an unpleasantly hot start to their shower. This process will also increase the life expectance of the unit in hard water areas reducing lime scale build up.

# SECTION 12


## SHOWERHEAD CLEANING INSTRUCTIONS

### IN SHOWER MAINTENANCE




To break away scale deposits on a daily basis simply rub your thumb over the rubber nipples whilst the shower is running.


The showerhead should be cleaned periodically to remove limescale or debris which will reduce the performance of the shower. The frequency of cleaning will vary according to local water quality. In hard water areas cleaning will be needed more often than in soft water areas. A liquid non-abrasive bathroom cleaner may be used on external surfaces of the handset.

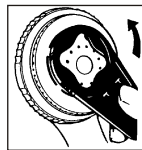


1. Engage the key into the spray cartridge recesses and turn anti-clockwise to unscrew.

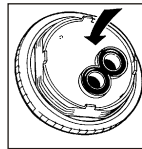

2. Remove the two small black 'O' rings from the rear of the spray cartridge, and rinse 'O' rings clean.

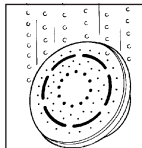


3. If deposits are stubborn, immerse and soak the spray cartridge for several hours in a proprietary limescale remover. Then with a small stiff bristled brush scrub the spray cartridge.

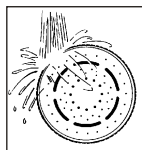

4. Ensure all traces of limescale and limescale remover are rinsed off.



5. Thoroughly clean and rinse the inside of the showerhead.

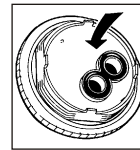

6. Replace the two black 'O' rings on the rear of the spray cartridge. A light smear of petroleum jelly will ensure an easy location into the grooves.



7. Refit cartridge to the showerhead and tighten with the spray key.



## GUARANTEE

Glen Dimplex UK Ltd guarantee this Galaxy product for a period of two years, from date of purchase, against mechanical and electrical defects arising from faulty materials or from poor workmanship, providing the product has been installed by a competent person in accordance with the fitting instructions.

Glen Dimplex UK Ltd undertake to repair or replace, at their discretion, without charge, provided the product has been properly maintained and operated in accordance with the operating instructions. Any component found to be defective during this period, as the result of misuse or damage, or the effects of scaling, will not be covered by this guarantee (with the exception of 'si' ('Scalemaster') models which are guaranteed against the effects of scaling).

This product must not be modified, repaired or taken apart except by a person authorised by Glen Dimplex UK Ltd.

This Guarantee is only valid within the United Kingdom and does not cover product used commercially.

This Guarantee does not affect your statutory rights.

Glen Dimplex UK Ltd.,  
Millbrook House,  
Grange Drive  
Hegde End, Southampton SO30 2DF  
Telephone: 0845 600 5111 -  
Fax: 01489 773050 -  
Website: [www.galaxy-showers.com](http://www.galaxy-showers.com)