



**Millennium
thermostatic
electric shower**



**Installation and
operating
instructions**

INSTALLERS PLEASE NOTE THESE INSTRUCTIONS ARE TO BE LEFT WITH THE USER

CONTENTS	Page
Important safety information	1
Introduction	2
Main components	3
Electrical requirements	5
Water requirements	7
Siting of the shower	8
Fitting the shower to the wall	9
Plumbing connections	11
Electrical connections	12
Replacing the cover	13
Commissioning	14
Setup link procedure	15
Operating the shower	16
Operating functions	18
Adjusting the showerhead	19
Cleaning	20
Instructions for installers and service engineers only	21
Spare parts	22
Fault finding	23
Guarantee, service policy, etc.	rear cover

To check the product suitability for commercial and multiple installations, please contact Triton's specification advisory service before installation.

Telephone: +44 (0) 87 0067 3767

Facsimile: +44 (0) 87 0067 3334

E mail: technical@triton.plc.uk

PLEASE READ THIS IMPORTANT SAFETY INFORMATION

- ◆ Products manufactured by Triton are safe and without risk provided they are installed, used and maintained in good working order in accordance with our instructions and recommendations.
- ◆ **WARNING: DO NOT operate shower if frozen, or suspected of being frozen. It must thaw out before using.**
- ◆ DO NOT operate the unit if the showerhead or spray hose becomes damaged.
- ◆ DO NOT restrict flow out of shower by placing showerhead in direct contact with your body.
- ◆ DO NOT operate the shower if water ceases to flow during use or if water has entered inside the unit because of an incorrectly fitted cover.
- ◆ **WARNING: If restarting the shower immediately after stopping, be aware that a slug of hot water will be expelled for the first few seconds.**

1 GENERAL

1.1 Isolate the electrical and water supplies before removing the cover.

1.2 Read all of these instructions and retain them for later use.

1.3 DO NOT take risks with plumbing or electrical equipment.

1.4 Isolate electrical and water supplies BEFORE proceeding with the installation.

1.5 The unit must be mounted onto the finished wall surface (on top of the tiles). DO NOT tile up to unit after fixing to wall.

1.6 Contact Customer Service (*see back page*), if any of the following occur:

a) If it is intended to operate the shower at pressures above the maximum or below the minimum stated.

b) If the unit shows a distinct change in performance.

c) If the shower is frozen.

1.7 If it is intended to operate the shower in areas of hard water (above 200 ppm temporary hardness), a scale inhibitor may have to be fitted. For advice on the Triton Scale Inhibitor, contact Triton Customer Service.

1.8 The showerhead must be cleaned regularly with descalent to remove scale and debris, otherwise restrictions to the flow on the outlet of the unit will result in higher temperatures and could also cause the Pressure Relief Device in the unit to operate.

1.9 This product is not suitable for mounting into steam rooms or steam cubicles.

2 PLUMBING

2.1 The plumbing installation must comply with Water Regulations, Building Regulations or any particular regulations as specified by Local Water Company or Water Undertakers and should be in accordance with BS 6700.

2.2 The supply pipe must be flushed to clear debris before connecting to the shower unit.

2.3 DO NOT solder pipes or fittings within 300 mm of the shower unit, as heat can

transfer along the pipework and damage components.

2.4 DO NOT fit any form of outlet flow control as the outlet acts as a vent for the heater can.

2.5 DO NOT use excessive force when making connections to the flexible hose or showerhead, finger tight is sufficient.

2.6 All plumbing connections MUST be completed BEFORE making the electrical connections.

3 ELECTRICAL

3.1 The installation must comply with BS 7671 'Requirements for electrical installations' (IEE wiring regulations), building regulations or any particular regulations as specified by the local Electrical Supply Company.

3.2 This appliance MUST be earthed.

3.3 In accordance with 'The Plugs and Sockets etc. (Safety) Regulations 1994', this appliance is intended to be permanently connected to the fixed wiring of the electrical mains system.

3.4 Make sure all electrical connections are tight to prevent overheating.

3.5 Fuses do not give personal protection against electric shock.

3.6 *To enhance electrical safety* a 30mA residual current device (RCD) should be installed in all UK electric and pumped shower circuits. This may be part of the consumer unit or a separate unit.

3.7 Switch off immediately at isolating switch if water ceases to flow during use.

3.8 Other electrical equipment i.e. extractor fans, pumps must not be connected to the circuits within the unit.

3.9 Switch off at isolating switch when not in use. This is a safety procedure recommended with all electrical appliances.

3.10 As with all electrical appliances it is recommended to have the shower and installation checked at least every two years by a competent electrician to ensure there is no deterioration due to age and usage.

INTRODUCTION

This book contains all the necessary fitting and operating instructions for your Triton Millennium electric shower.

Take time to read this book thoroughly and familiarise yourself with all instructions before commencing installation.

Please keep it for future reference.

The shower installation must be carried out by a suitably qualified person and in the sequence of this instruction book.

Care taken during the installation will ensure a long, trouble-free life from your shower.

SPECIFICATIONS

Electrical

Nominal power rating at 240V	Nominal power rating at 230V
8.5kW – (40A MCB rating)	7.8kW – (40A MCB rating)
9.5kW – (40A MCB rating)	8.7kW – (40A MCB rating)

Water

Inlet connection – 15 mm diameter.

Outlet connection – ½" BSP male thread.

Entry Points

Water – top, bottom, back or right.

Cable – top, bottom, back or right.

Materials

Backplate, cover, controls, showerhead – ABS.

Sprayplate – Acetal.

Elements – Minerally insulated corrosion resistant metal sheathing.

Dimensions (mm)

Height – 413, Width – 243, Depth – 97

Standards and Approvals

Splashproof rating IPX4

Complies with the requirements of current British and European safety standards for household and similar electrical appliances.

Complies with requirements of the British Electrotechnical Approvals Board (BEAB).

Meets with Compliance with European Community Directives (CE).

Replacement parts can be ordered from Customer Service. See 'spare parts' for details and part numbers.

Due to continuous improvement and updating, specification may be altered without prior notice.

UNDERSTANDING YOUR MILLENNIUM

a. Temperature/flow rate

The temperature control on the unit can be adjusted to provide shower temperatures between 35°C and 47°C.

Alternatively, the shower temperature can be restricted by moving the set-up link on the cover PCB to one of three positions, providing 41°C, 43°C or 47°C maximum.

At a selected temperature the unit will maintain a set flow rate.

The unit has 4 flow options:

- 1 Cold (4.5 litres per minute)
- 2 Low flow (3 litres per minute)
- 3 Medium flow (4.5 litres per minute)
- 4 High flow (max 6 litres per min – average)

If the unit is unable to maintain a stated flow rate for the temperature required due to variations in incoming water temperature/pressure, the unit will supply the maximum flow rate possible.

Note the maximum flow rate for the given temperature will be greater in the Summer than in the Winter because of the variance in the ambient mains water supply.

b. Temperature stabilisation

The shower will maintain the user's selected temperature to within +1°C when pressure changes occur (within the pressure range stated in the site requirements) and when there are fluctuations in voltage (within the UK supply tolerance) and inlet water temperature.

c. Safety cut-out


The unit is fitted with a non-resettable over-temperature safety device. In the event of abnormal operation which could cause unsafe temperatures within the unit, the device will disconnect the heating elements. It will require a visit from a qualified engineer to determine the nature of the fault and replace the safety device, once the unit has been repaired.



IMPORTANT: When first installed the heater can will be empty. It is essential the can should contain water before the elements are switched on. As this unit has electronic control, it is vital that the commissioning procedure is followed as instructed. Failure to carry out this operation will result in damage to the unit and will invalidate the guarantee.

MAIN COMPONENTS (CONTINUED)

Fig.2

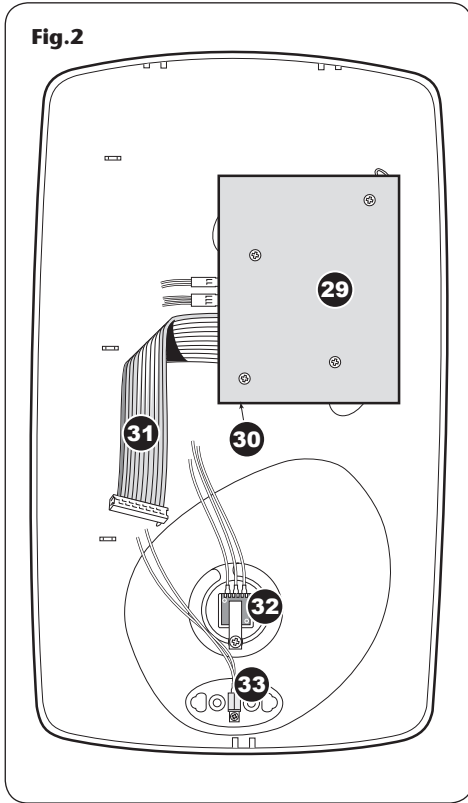

Inside the cover (fig.2)

- 29.** Control PCB
- 30.** Set-up link (factory set at 'purge' position)
- 31.** 20-way ribbon
- 32.** Potentiometer
- 33.** Start/stop switch



ELECTRICAL REQUIREMENTS

WARNING! THIS APPLIANCE MUST BE EARTHED

The installation, supply cable and circuit protection must conform with BS7671 (IEE wiring regulations) and be sufficient for the amperage required.

The following notes are for guidance only:

- 1 The shower must only be connected to a 230-240V ac supply. If you are installing a shower with a kilowatt rating above 9kW, it is advisable to contact the local electricity supply company.
- 1.1 The electrical rating of the shower is shown on the rating label (fig.3) within the unit.

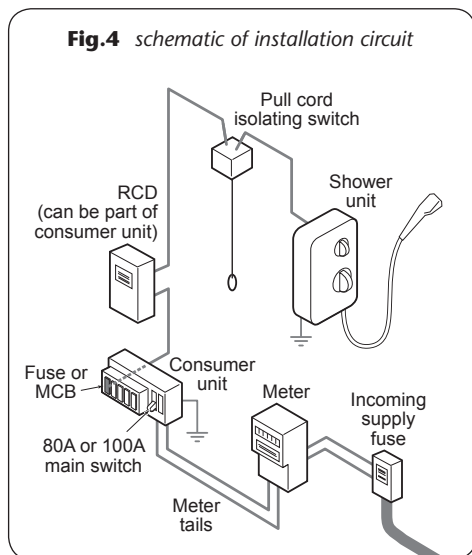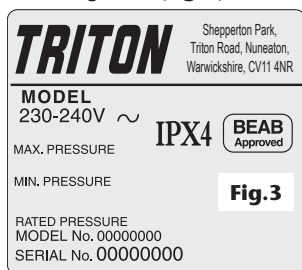

- 2 Before making any sort of electrical connection within the installation make sure that no terminal is live. If in any doubt, switch off the whole installation at the consumer unit.
- 3 The shower must be connected to its own independent electrical circuit. IT MUST NOT be connected to a ring main, spur, socket outlet, lighting circuit or cooker circuit.
- 3.1 The electrical supply must be adequate for the loading of the unit and existing circuits.
- 4 Check your consumer unit (main fuse box) has a main switch rating of 80A or above and that it has a spare fuse way which will take the fuse or MCB necessary for the shower (fig.4).
- 4.1 If your consumer unit has a rating below 80A or if there is no spare fuse way, then the installation will not be straightforward and may require a new consumer unit serving the house or just the shower.
- 4.2 You will need to contact the local electricity company. They will check the circuit and carry out what is necessary. They will also check the main bonding.
- 5 The earth continuity conductor of the electrical installation must be effectively connected electrically to all exposed metal parts of other appliances and services in the room in which the shower is to be installed, to conform to current IEE regulations.

Table A

CIRCUIT PROTECTION		
unit rating	MCB	cartridge fuse
7.0kW	30/32A	30A
7.5kW	32A	35A
8.0kW	40A	35A
8.5kW	40A	45A
9.0kW	40A	45A
9.5kW	40/45A	45A
10.5kW	45A	45A

- 5.1 All exposed metallic parts in the bathroom must be bonded together using a cable of at least 4 mm² cross sectional area. These parts include metal baths, radiators, water pipes, taps and waste fittings.
- 6 For close circuit protection DO NOT use a rewireable fuse. Instead use a suitably rated miniature circuit breaker (MCB) or cartridge fuse (**see table A**).
- 6.1 In the interest of electrical safety a 30mA residual current device (RCD) should be installed in all UK electric and pumped shower circuits. This may be part of the consumer unit or a separate unit.
- 7 A 45 amp double pole isolating switch with a minimum contact gap of 3 mm in both poles must be incorporated in the circuit.
 - 7.1 It must have a mechanical indicator showing when the switch is in the OFF position, and the wiring must be connected to the switch without the use of a plug or socket outlet.
 - 7.2 The switch must be accessible and clearly identifiable, but out of reach of a person using a fixed bath or shower, except for the cord of a cord operated switch, and should be placed so that it is not possible to touch the switch body while standing in a bath or shower cubicle. It should be readily accessible to switch off after using the shower.
- 8 Where shower cubicles are located in any room cubicles/T1 1 Tf.0 0 8 23ar2iu0led
- 9 The current carrying capacity of the cable
 - 9.1 To obtain fu
 - 9.2 It is also necessary to satisfy the
- 10 The shower circuit should be separated

e

Current carrying capacity

	In conduit	Clipped direct or buried in a non-insulated
²		
32A	38A	46A
10 mm ²	10 mm ²	10 mm ²
43A	52A	63A
16 mm ²	16 mm ²	16 mm ²
57A	69A	85A

Note: Cable selection is dependent on derating factors

10.3

WATER REQUIREMENTS

The installation must be in accordance with Water Regulations/Bylaws.

To ensure activation of the heating elements, the shower must be connected to a mains water supply with a minimum running pressure of 100kPa (1.0 bar) at a minimum flow rate of eight litres per minute for the 8.5kW rated model and nine litres per minute for the 9.5kW rated model. For all units the maximum static pressure must be no greater than 1 000kPa (10 bar).

If in any doubt, the pressure should be checked.


Note: If the stated flow rate are not available, it may not be possible to achieve optimum performance from the unit throughout the year.

The water supply can be taken from a cold water storage cistern provided there is a minimum head of ten metres. Minimum head is the vertical distance from the base of the cistern to the showerhead. It must be an independent supply to the shower only.

If it is intended to operate the shower at pressures above the maximum or below the minimum stated, contact Customer Service for advice.


Fig.5 shows a typical system layout.

DO NOT use jointing compounds on any pipe fittings for the installation.

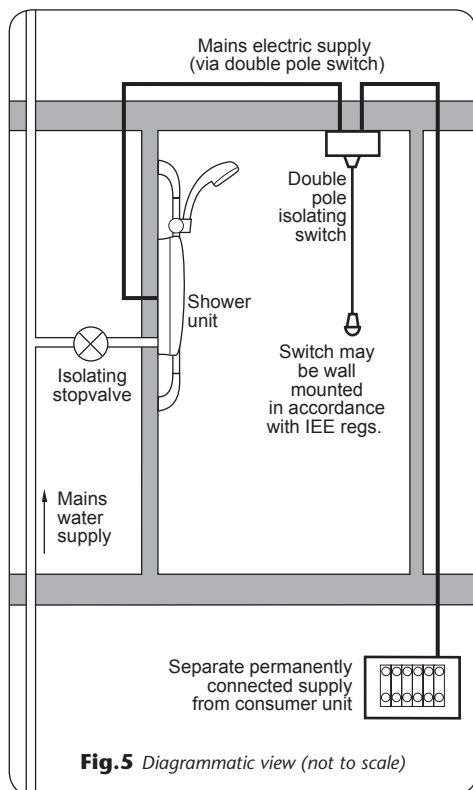

WARNING!

The shower must not be positioned where it will be subjected to freezing conditions.

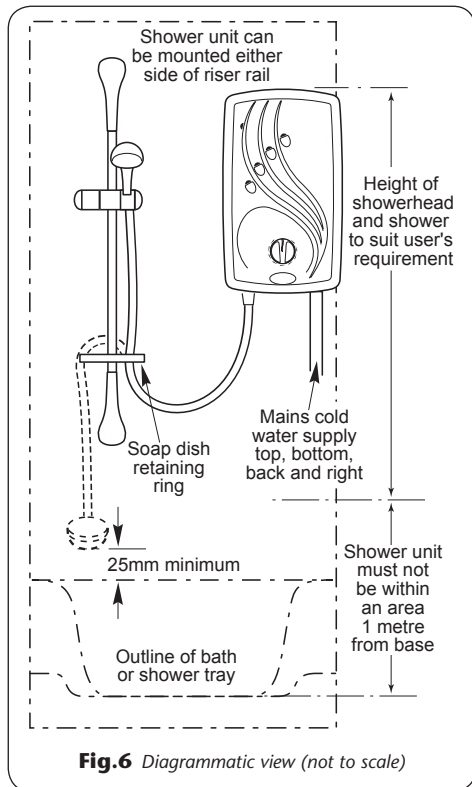

IMPORTANT: The unit must be mounted on a flat surface which covers the full width and length of the backplate. It is important that the wall surface is flat otherwise difficulty may be encountered when fitting the cover and subsequent operation of the unit may be impaired.

SITING OF THE SHOWER

FOR EASE OF SERVICING, THE UNIT MUST ALWAYS BE MOUNTED ON THE SURFACE OF TILED WALLS. NEVER TILE UP TO THE UNIT.

Refer to **fig.6** for correct siting of shower. Position the unit where it will NOT be in direct contact with water from the showerhead. Position the shower unit vertically.

Allow sufficient room between the ceiling and the shower to access the cover top screws.

Note: Water Regulations (shower hose connections) requires the showerhead be 'constrained by a fixed or sliding attachment so that it can only discharge water at a point not less than 25 mm above the spill-over level of the relevant bath, shower tray or other fixed appliance'. The use of the supplied soap dish will in most cases meet this requirement, but if the showerhead can be placed within a bath, basin or shower tray, then a double check valve, or similar, must be fitted in the supply pipework to prevent back-flow.

Pressure relief safety device

A pressure relief device (PRD) is designed into the shower unit which complies with European standards. The PRD provides a level of appliance protection should an excessive build up of pressure occur within the shower.

DO NOT operate the shower with a damaged or kinked shower hose, or a blocked showerhead which can cause the PRD to operate.

When commissioning, the showerhead must be removed from the flexible hose, while at the same time the temperature control must be at the minimum flow position. Failure to follow this procedure may also cause the PRD to operate.

Ensure the shower is positioned over a bath or shower tray because if the PRD operates, then water will eject from the bottom of the unit.

Should this happen, turn off the electricity and water supplies to the shower at the isolating switch and stopvalve. Contact Customer Service for advice on replacing the PRD.

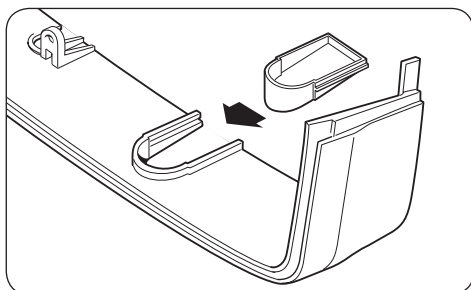
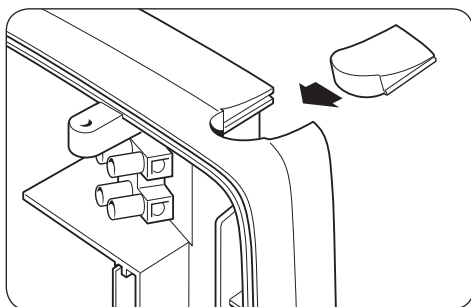
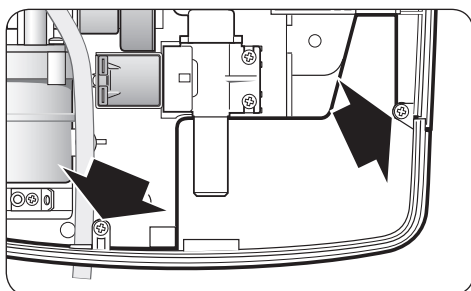


Fig.11

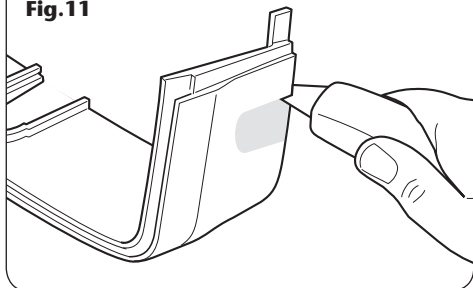


Fig.12


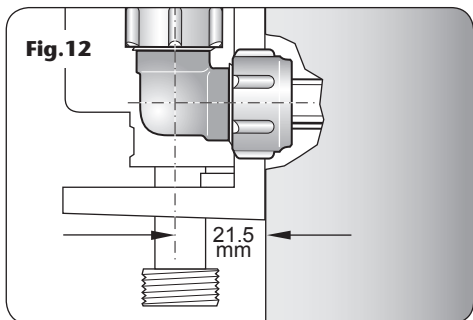


Fig.13

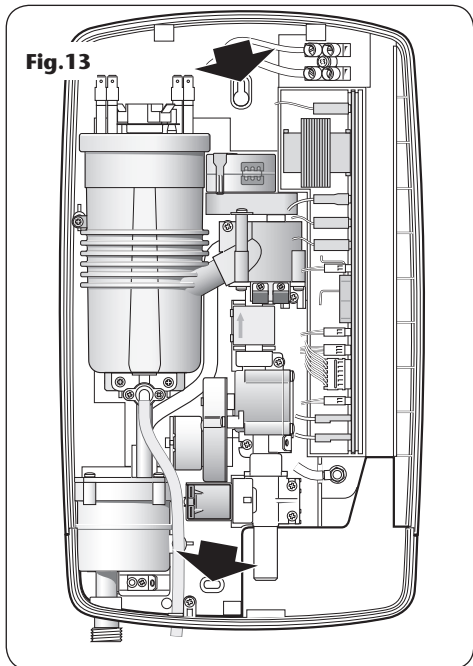

After choosing the site for the shower, use the backplate as a template and mark the two fixing holes (**fig.13**). Drill and plug to suit the fixing screws supplied. (The wall plugs provided are suitable for most brick walls — use an appropriate masonry drill, but if the wall is plasterboard or a soft building block, you must use special wall plugs and a suitable drill).

Screw the top fixing screw into position leaving the base of the screw head protruding 6 mm (0.25in) out from the wall.

Hook the backplate over the top screw and fit the bottom fixing screw into position. Do not fully tighten the screws at this stage, as the fixing holes are elongated to allow for out of square adjustment after the plumbing connections have been completed.

PLUMBING CONNECTIONS

Plumbing to be carried out before wiring

DO NOT use jointing compounds on any pipe fittings for the installation.

DO NOT use soldered fittings near the area of the shower unit as heat can transfer along the pipework and can damage components.

Compression fittings MUST be used to connect to the inlet of the shower. (Push-on fittings must NOT be used as full engagement cannot be guaranteed).

Note: An additional stopvalve (complying with Water Regulations) MUST be fitted in the mains water supply to the shower as an independent means of isolating the water supply should maintenance or servicing be necessary.

IMPORTANT: Before completing the connection of the water supply to the inlet of the shower, flush out the pipework to remove all swarf and system debris. This can be achieved by connecting a hose to the pipework and turning on the mains water supply long enough to clear the debris to waste.

Procedure

Turn off the water supply either at the mains stopvalve or the isolating stopvalve. Connect the mains water supply to the inlet of the shower via 15 mm copper, stainless steel pipe or plastic pipe using a 15 mm x 15 mm elbow or straight compression fitting.

DO NOT use excessive force when making these connections.

Ensure the backplate is square on the wall and tighten the two retaining screws which hold it to the wall.

Turn on the mains water supply and check for leaks in the pipework connection to the shower.

Note: At this stage no water can flow through the unit.


WARNING!

The outlet of the shower acts as a vent and must not be connected to anything other than the hose and showerhead supplied.

WARNING!

The use of connections within the unit to supply power to other equipment i.e. extractor fans, pumps etc. will invalidate the guarantee.

Fig.14

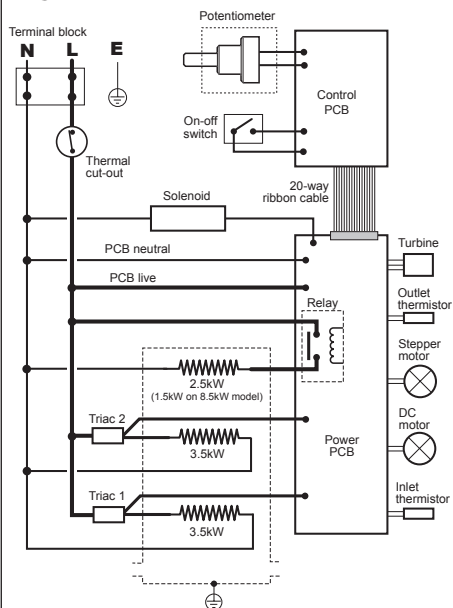


ELECTRICAL CONNECTIONS

SWITCH OFF THE ELECTRICITY SUPPLY AT THE MAINS.

Fig.14 shows a schematic wiring diagram.

The cable entry points are shown in **fig.1**. The cable can be surface clipped, hidden or via 20 mm conduit.

Note: Conduit entry can only be from rear. Route the cable into the shower unit and connect to the terminal block (**fig.15**) as follows:

Earth cable to terminal marked **E** 

Neutral cable to terminal marked **N**

Live cable to terminal marked **L**

IMPORTANT: Fully tighten the terminal block screws and ensure that no cable insulation is trapped under the screws. Loose connections can result in cable overheating.

Note: The supply cable earth conductor must be sleeved. The outer sheath of the supply cable must be stripped back to just before the terminal block.


The supply cable must be secured either by routing through conduit or in trunking or by embedding in the wall, in accordance with current IEE regulations.




The earth continuity conductor of the electrical installation must be effectively connected electrically to all exposed metal parts of other appliances and services in the room in which the shower is to be installed, to conform to current IEE regulations.

DO NOT switch on the electricity supply to the shower until the cover has been fitted.


Note: The elements on UK models are to 240V specification and will give a lower kW rating if the voltage supply is below 240V.

Fig.15

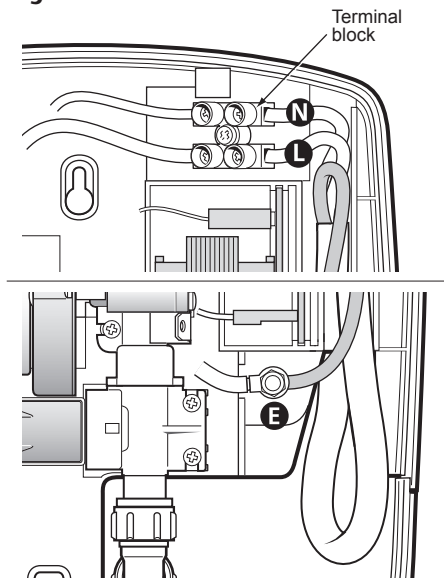

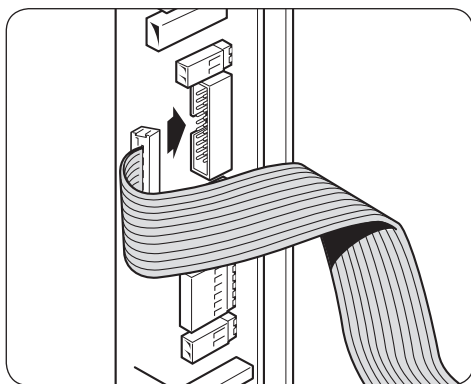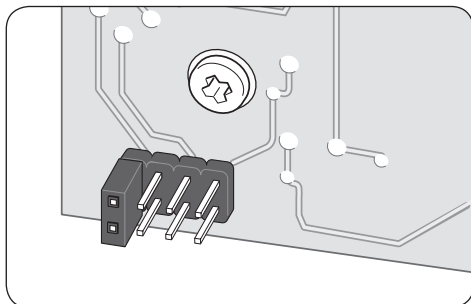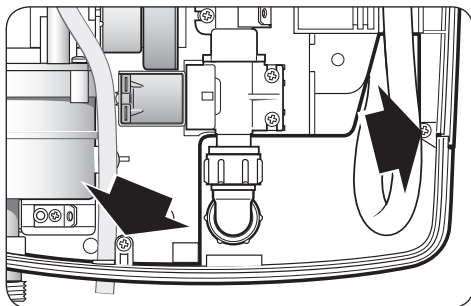

COMMISSIONING

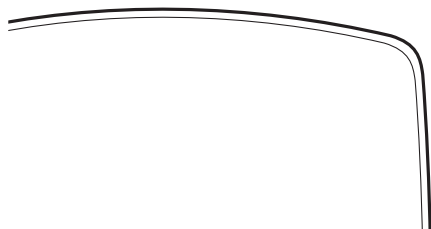

The first operation of the shower is intended to flush out any remaining system debris and to ensure water is purged through the unit. This operation must be carried out with the flexible hose screwed to the shower outlet but **WITHOUT** the showerhead attached.

Ensure the outlet of the flexible hose is directed to waste.

BEFORE turning on the electric supply to the shower, ensure that the cover is fitted.

Ensure the water supply to the shower is turned on at the isolating stopvalve.

Switch on the electricity supply to the shower at the isolating switch. Immediately the flow control button indicators will light up in sequence and repeatedly flash while water starts to flow from the flexible hose.

It will take approximately sixty seconds for a smooth flow of water to be obtained whilst air and any debris is being dispersed from the shower.

Once the flushing out has been completed, do not press the Stop/Start button but stop the water flow only by switching off the electricity supply to the shower at the isolating switch.

SETUP LINK PROCEDURE

Unscrew the top and bottom retaining screws (**fig.7**) again and remove the cover from the backplate. It is not necessary to disconnect the 20-way ribbon cable as long as it is convenient to support the cover with one hand while moving the setup link with the other.

DO NOT let the cover dangle with the weight taken by the cable.

The setup link is located on the bottom left corner of the control PCB inside the cover (**fig.20**).

Apart from the 'purge' position, there are three other sets of pins on which the link can be placed as indicated (**fig.21**). These represent the maximum temperature restrictions (41°C, 43°C, or 47°C) of the shower when the temperature control is turned fully clockwise to '10'.

For normal use, place the link on the right-hand set of pins (47°C maximum — **fig.22**).

For situations where the main usage of the shower is for the elderly or young children, then place the link on either of the other two sets of pins (41°C or 43°C). This will restrict the maximum temperature to these limits should the temperature control otherwise be accidentally turned up too high.

Replacing the cover

Carefully locate the cover into the backplate, ensuring wires are not trapped, and guide into position.

Whilst applying slight pressure to the front cover, secure in position with the three retaining screws.

Turn the electric supply back on at the isolating switch.

Fit the showerhead to the flexible hose and place in showerhead holder.

The shower is ready for normal operation.



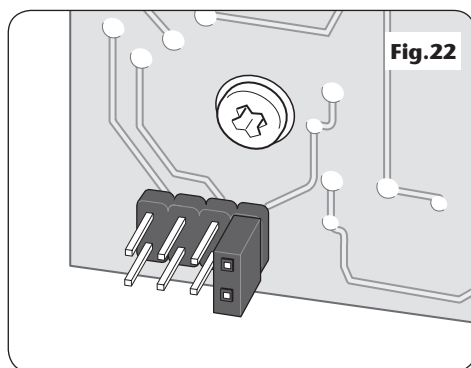


Fig.23

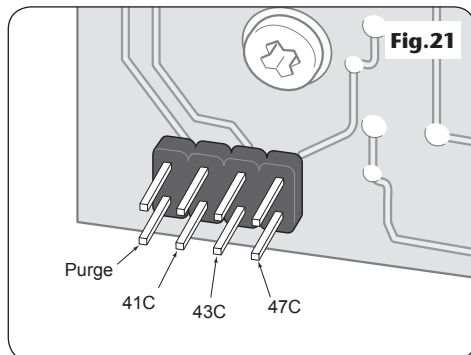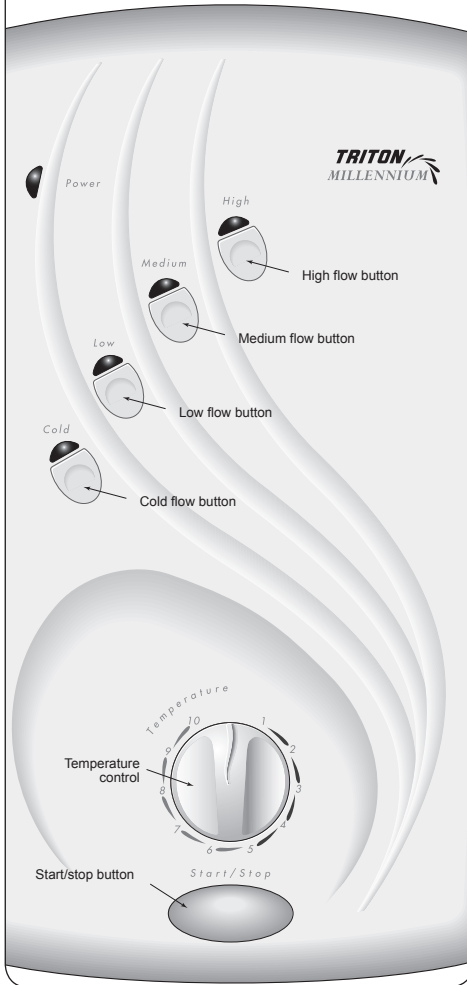

OPERATING THE SHOWER

WARNING!

Before normal operation of the shower, it is essential that the commissioning procedure has been completed correctly.

Note: Whenever power is switched on at the isolating switch, the shower will run through a start-up routine and the LED indicators will light up in sequence for a few seconds.

To start the shower

The shower can be started in two ways. Either by pressing the start/stop button (**fig.23**) or by pressing any of the four flow buttons.

Pressing the start/stop button will start water to flow at the high flow rate by default. The high flow indicator will light.

Pressing any one of the four flow buttons will start water to flow. The appropriate indicator will light (see below for detailed operation).

To stop the shower

Press the start/stop button and the phased shutdown will commence. Water will cease to flow after approximately four seconds.

For correct operation, the unit should always be switched off at the start/stop button, prior to switching off at the isolating switch.

To use the flow control buttons

There are four control buttons (cold, low, medium and high) as shown in **fig.23**. These control and maintain the flow only, at any selected temperature.

Cold is for cold water only. Adjustment of the temperature control at this setting will have no effect on the flow of water. Cold water at the ambient temperature will flow at a maximum of 4.5 litres per minute.

Low maintains a maximum flow rate of 3 litres per minute regardless of the temperature control position. The shower automatically adjusts to maintain the flow rate at the selected temperature and not to increase more than +1°C

Note: In normal use, it is in order to leave the water supply permanently on to the shower unit, but as with most electrical appliances, **the unit must be switched off at the isolating switch when not in use.**

of the setting.

Medium maintains a maximum flow rate of 4.5 litres per minute regardless of the temperature control position. The shower automatically adjusts to maintain the flow rate at the selected temperature and not to increase more than +1°C of the setting.

High allows the maximum flow possible for your selected temperature. The shower automatically adjusts to provide the highest flow rate achievable at the selected temperature and not to increase more than +1°C of the setting. This setting should be regarded as normal for optimum shower performance throughout the year.

Note: If the unit is unable to maintain a selected flow rate for the temperature required due to variations in incoming water temperature/pressure, the unit will supply the maximum flow rate possible.

Adjusting the shower temperature

The water temperature is altered by adjusting the temperature control (**fig.23**).

For a cooler shower temperature, turn the temperature control anti-clockwise towards the lower numbers.

For a hotter shower, turn the temperature control clockwise towards the higher numbers.

After obtaining your preferred showering temperature, the number can be remembered and left as the normal setting.

Note: It is advisable to be certain that the showering temperature is satisfactory by testing with your hand BEFORE stepping under the showerhead.

There will always be a time delay of a few seconds between selecting a temperature and the water reaching the stable temperature.

CAUTION: It is recommended that persons who may have difficulty understanding or operating the shower controls should not be left unattended whilst showering.

Special consideration should be given to young children and the less able bodied.

WARNING!

After any servicing of mains water supply, always ensure the unit is started on COLD in order to purge any air in the pipework.

OPERATING FUNCTIONS

Power on indicator (fig.24)

When the electricity supply to the shower is switched on at the isolating switch, the 'power' indicator will light, and will remain lit until the power is switched off again at the isolating switch.

Note: Whenever power is switched on at the isolating switch, the shower will run through a start-up routine and the LED indicators will light up in sequence for a few seconds.

Flow indicators (fig.24)

Above each flow button there is an LED which indicates the flow option in use.

Phased shutdown


In use, when the start/stop button is pressed, power is switched off to the elements. Water continues to flow for a few seconds, flushing out any remaining hot water. This ensures the next immediate user will not receive a slug of hot water if standing under the showerhead when starting the shower.

Low flow sensor

Should the mains water pressure fall below the minimum specified operating pressure, the low flow LED will flash continuously and the unit will turn off. When pressure returns to normal the shower can be restarted by pressing the start or flow buttons. If the unit fails to return to normal operation it will be necessary to have the water supply and unit checked.



Safety cut-out

The unit is fitted with a non-resettable over-temperature safety device. In the event of abnormal operation which could cause unsafe temperatures within the unit, the device will disconnect the heating elements. It will require a visit from a qualified engineer to determine the nature of the fault and replace the safety device, once the unit has been repaired.

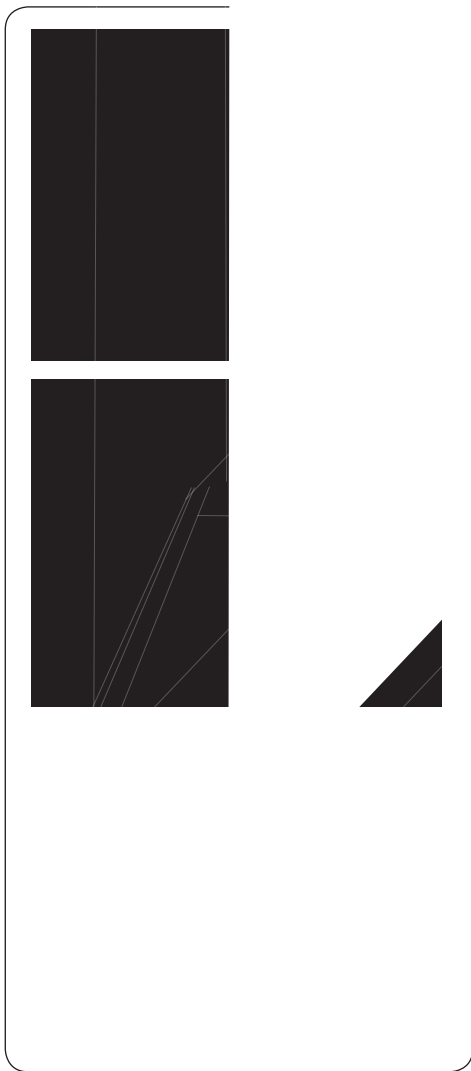

WARNING!

DO NOT use 'powerful' abrasive or solvent cleaning fluids when cleaning the shower as they may damage the plastic fittings.

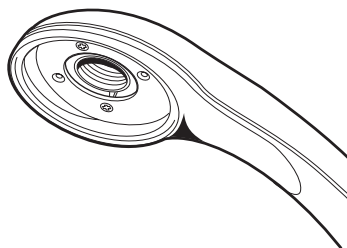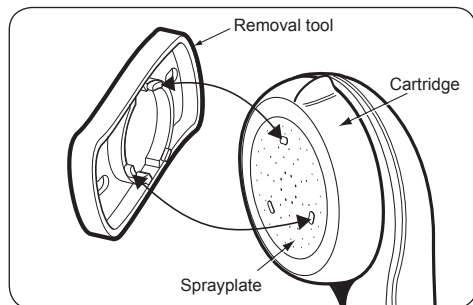

CLEANING

DO NOT use abrasive or solvent cleaning fluids. The shower unit, riser rail, hose, etc. should be cleaned using a soft cloth and warm water.

It is advised before cleaning, to turn the isolation switch off, thus avoiding the shower being accidentally switched on.

IT IS IMPORTANT TO KEEP THE SHOWERHEAD CLEAN TO MAINTAIN THE PERFORMANCE OF THE SHOWER. The hardness of the water will determine the frequency of cleaning. For example, if the shower is used every day in a very hard water area, it may be necessary to clean the showerhead on a weekly basis.

Sprayplate and cartridge removal

There is no need to remove the showerhead from the hose.

Using the removal tool supplied (**fig.26**), locate the three raised 'bosses' into the three recesses in the sprayplate. Hold in firmly and twist anti-clockwise (**fig.27**). This movement may turn the cartridge assembly as well until it reaches a 'STOP'.

Hold the cartridge firmly and continue to twist anti-clockwise. Having loosened the sprayplate sufficiently, it can be unscrewed and removed completely (**fig.28**).

To remove the cartridge, hold firmly and turn anti-clockwise until it unscrews from the showerhead (**fig.29**).

Clean the sprayplate and cartridge with a suitable brush or preferably leave them to soak overnight in a mild proprietary descaler. Ensure all traces of scale are removed and thoroughly rinse in clean water afterwards.

Before replacing the sprayplate and cartridge, switch the power back on at the isolating switch, direct the hose and showerhead to waste and press the 'COLD' button.

This operation will flush out any loose scale deposits in the unit and showerhead. Stop after approximately thirty seconds.

Refit the sprayplate and cartridge by screwing clockwise. Use the tool to screw in the sprayplate tight.

INSTRUCTIONS FOR INSTALLERS AND SERVICE ENGINEERS ONLY

CLEANING THE INLET FILTER


It is recommended that the filter is periodically cleaned in order to maintain the performance of the shower. It is essential that this operation is carried out by a competent person.

SWITCH OFF THE ELECTRICITY SUPPLY.

The inlet filter is situated in the inlet pipe which is part of the solenoid valve (**fig.30**).

To gain access to the filter will require the trimplate to be removed and disconnecting and removal of the compression fitting. Also, depending on the incoming pipework arrangements, if there is not enough slack in the pipework, it could mean the removal of the unit from the wall.

When cleaning the wire mesh filter, DO NOT use a sharp object, as it will cause damage. It is preferable to use an old toothbrush or similar.

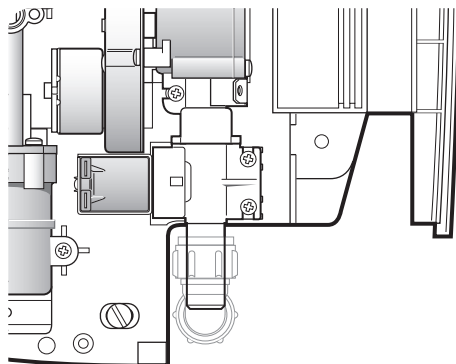

FAULT FINDING

IMPORTANT: Switch OFF the electricity at the mains supply and remove the circuit fuse before removing the cover from the shower while attempting any fault finding inside the unit.

Problem/Symptom	Cause	Action/cure
1. Shower inoperable.	1.1 Interrupted power supply.	1.1.1 Blown fuse or circuit breaker. Check supply. Renew or reset fuse or circuit breaker. If it fails again, consult a qualified electrician.
	1.2 Unit malfunction.	1.2.1 Contact Customer Service for advice.
2. Water too hot.	2.1 Temperature control incorrect setting.	2.1.1 Turn anti-clockwise.
	2.2 Unit malfunction.	2.2.1 Contact Customer Service for advice.
3. Water too cool or cold.	3.1 Temperature control incorrect setting.	3.1.1 Turn clockwise.
	3.2 Setup link fitted on a lower temperature setting.	3.2.1 Isolate unit at isolating switch. Re-position setup link onto higher temperature pins (see 'Setup link procedure'). Re-adjust the temperature control.
	3.3 Unit malfunction.	3.3.1 Contact Customer Service for advice.
4. Unstable shower temperature/flow.	4.1 Blockages	4.1.1 Clean showerhead. Check inlet filter in solenoid and clean if necessary.
	4.2 Loose PCB connection	4.2.1 Check electrical connections on PCB's are correctly fitted.
	4.3 Unit malfunction.	4.3.1 Contact Customer Service for advice.
5. Pressure relief device has operated (water from PRD tube). Note:- Identify cause of operation before fitting new PRD unit. When fitting new PRD, follow commissioning procedure.	5.1 Blocked showerhead.	5.1.1 Clean or replace blocked showerhead cartridge and then fit a new PRD.
	5.2 Twisted/blocked flexible shower hose.	5.2.1 Check for free passage through hose. Replace the hose if necessary, then fit new PRD.
	5.3 Showerhead not removed whilst commissioning.	5.3.1 Fit new PRD. Commission unit with showerhead removed.

FAULT FINDING

Problem/Symptom	Cause	Action/Cure
6. Unit fails to turn off and water flowing. LED's flashing in sequence.	6.1 Link pin has not been removed from the 'purge' position or is incorrectly positioned.	6.1.1 Isolate unit at isolating switch. Re-position setup link onto correct temperature pins (see 'Setup link procedure').
7. Water continues to flow when unit is isolated at the isolating switch.	7.1 Debris in solenoid.	7.1.1 Contact Customer Service for advice.
8. Medium LED flashing continuously unit switches off.	8.1 Faulty inlet or outlet sensor.	8.1.1 Contact Customer Service.
9. Low LED flashing continuously unit switches off.	9.1 Low water pressure. 9.2 Faulty flow turbine. 9.3 Blocked inlet filter. 9.4 Blocked showerhead.	9.1.1 Wait for water pressure to return to normal, restart unit. 9.2.1 Contact Customer Service. 9.3.1 Clean the filter in solenoid. 9.4.1 Clean the showerhead.

In the unlikely event of unit failure other than detailed in the fault finding page, please contact Customer Service for advice.

It is advised all electrical maintenance/repairs to the shower should be carried out by a suitably qualified person.

WARNING

Before proceeding with any repair work or fault finding exercise, be aware that the printed circuit boards in this unit are static electricity sensitive and must be treated with great care. In order to prevent damage to the PCB's, a static control wrist strap must be worn before handling or removing the printed circuit boards.



*A **MORCROS** Company*

Service Policy

In the event of a complaint occurring, the following procedure should be followed:

1 Telephone Customer Service on +44 (0) 87 0067 3333 (+44 (0) 84 5762 6591 in Scotland and in Northern Ireland), having available the model number and power rating of the product, together with the date of purchase.

2 Triton Customer Service will be able to confirm whether the fault can be rectified by either the provision of a replacement part or a site visit from a qualified Triton service engineer.

3 If a service call is required the unit must be fully installed for the call to be booked and the date confirmed. In order to speed up your request, please have your postcode available when booking a service call.

4 It is essential that you or an appointed representative (who must be a person of 18 years of age or more) is present during the service engineer's visit and receipt of purchase is shown.

5 A charge will be made in the event of an aborted service call by you but not by us, or where a call under the terms of guarantee has been booked and the failure is not product related (i.e. scaling and furring, incorrect water pressure, pressure relief device operation, electrical installation faults).

6 If the product is no longer covered by the guarantee, a charge will be made for the site visit and for any parts supplied.

7 Service charges are based on the account being settled when work is complete, the engineer will then request payment for the invoice. If this is not made to the service engineer or settled within ten working days, an administration charge will be added.

Replacement Parts Policy

Availability: It is the policy of Triton to maintain availability of parts for the current range of products for supply after the guarantee has expired. Stocks of spare parts will be maintained for the duration of the product's manufacture and for a period of five years thereafter.

In the event of a spare part not being available a substitute part will be supplied.

Payment: The following payment methods can be used to obtain spare parts:

1 By post, pre-payment of pro forma invoice by cheque or money order.

2 By telephone, quoting credit card (MasterCard or Visa) details.

3 By website order, www.tritonshowers.co.uk

Triton Plc
Triton Road
Nuneaton
Warwickshire CV11 4NR

TRITON STANDARD GUARANTEE

Triton Plc guarantee this product against all mechanical and electrical defects arising from faulty workmanship or materials for a period of two years for domestic use only, from the date of purchase, provided that it has been installed by a competent person in full accordance with the fitting instructions.

Any part found to be defective during this guarantee period we undertake to repair or replace at our option without charge so long as it has been properly maintained and operated in accordance with the operating instructions, and has not been subject to misuse or damage.

This product must not be taken apart, modified or repaired except by a person authorised by Triton Plc. This guarantee applies only to products installed within the United Kingdom and does not apply to products used commercially. This guarantee does not affect your statutory rights.

What is not covered:

1 Breakdown due to: *a)* use other than domestic use by you or your resident family; *b)* wilful act or neglect; *c)* any malfunction resulting from the incorrect use or quality of electricity, gas or water or incorrect setting of controls; *d)* faulty installation.

2 Repair costs for damage caused by foreign objects or substances.

3 Total loss of the product due to non-availability of parts.

4 Compensation for loss of use of the product or consequential loss of any kind.

5 Call out charges where no fault has been found with the appliance.

6 The cost of repair or replacement of pressure relief devices, showerheads, hoses, riser rails and/or wall brackets, isolating switches, electrical cable, fuses and/or circuit breakers or any other accessories installed at the same time.

7 The cost of routine maintenance, adjustments, overhaul modifications or loss or damage arising therefrom, including the cost of repairing damage, breakdown, malfunction caused by corrosion, furring, pipe scaling, limescale, system debris or frost.

Customer Service: ☎ +44 (0) 87 0067 3333

Scottish and Northern Ireland

Customer Service: ☎ +44 (0) 84 5762 6591

Trade Installer Hotline: ☎ +44 (0) 87 0067 3767
Fax: +44 (0) 87 0067 3334

www.tritonshowers.co.uk

E mail: technical@triton.plc.uk